

# GP2500



**370030**

**ENGLISH**

**Table of contents**

<b>1. Safety .....</b>	<b>18</b>
1.1 Key to symbols .....	18
1.2 Safety instructions .....	19
1.3 Proper use .....	21
<b>2. General information .....</b>	<b>24</b>
2.1 Liability and Warrantees .....	24
2.2 Copyright protection .....	24
2.3 Declaration of conformity .....	24
<b>3. Transport, packaging and storage.....</b>	<b>25</b>
3.1 Delivery check .....	25
3.2 Packaging.....	25
3.3 Storage.....	25
<b>4. Technical data .....</b>	<b>26</b>
4.1 Overview of parts .....	26
4.2 Technical specification .....	27
<b>5. Installation and operation.....</b>	<b>27</b>
5.1 Installation .....	27
5.2 Operation.....	28
<b>6. Cleaning .....</b>	<b>31</b>
<b>7. Waste disposal .....</b>	<b>32</b>

Bartscher GmbH  
Franz-Kleine-Str. 28  
33154 Salzkotten  
Germany

phone: +49 (0) 5258 971-0  
fax: +49 (0) 5258 971-120



**Read this instruction manual before using and keep them available at all times!**

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

## 1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

### 1.1 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



**DANGER!**

This symbol highlights hazards which could lead to injury.



**WARNING!**

This symbol highlights dangerous situations which could lead to injury or death.



### **HOT SURFACE!**

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!



### **CAUTION!**

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



### **NOTE!**

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

## **1.2 Safety instructions**

- The device is not intended for use by individuals (including children) with physical or mental disabilities, insufficient experience, and/or insufficient knowledge unless such persons are under the care of a person responsible for their safety or have received instructions regarding appropriate use of the device.
- Children should be observed to ensure that they are not playing with or starting the device.
- Never leave the device unattended when in use.
- **Never** leave the device unattended when in use.
- Only use the device indoors.
- The device is not adapted for use with an external timer or remote control.
- The device must be operated in correct and safe technical condition only. In case of operational problems disconnect the device from the power supply and contact the service company.

- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements. **Suffocation hazard!**
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.



## **DANGER! Electric shock hazard!**

To avoid the hazard results please follow the safety instructions below.

- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled. Never place the device or other objects on the power cable.
- Do not cover the cable. Keep away the cable from operating range and do not immerse it into water.

- Check the power cord regularly for damage. Do not use the device if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.
- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the **electric shock hazard** will occur.
- Do not use any acid agents and make sure no water ingresses the device.
- **Never** operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
  - when the device is not used,
  - in case of anomalies during operation,
  - before cleaning.



### **HOT SURFACE! Burn hazard!**

To avoid the effects of this risk, follow the safety instructions presented below.

- The housing of the device and the grill surface become very hot during the operation. Do not touch them with bare hands. Use appropriate kitchen utensils for placing and removing food.
- The grill surface remains hot for some time after turning off, so before cleaning or moving the device wait until it cools down.



## **WARNING! Fire or explosion hazard!**

Follow the safety instructions listed in order to avoid the hazard:

- To avoid the fire hazard and the damages of the device never place the kitchen utensils, towels, paper, etc. on the grill surface.
- **Never** use the device near flammable materials, such as alcohol, spirits, or petrol. High temperature may cause their evaporation and due to contact with the ignition sources the deflagration may occur, and in result the injuries and damages.
- In case of fire before the fire extinguishing activities remove the plug from the socket or disconnect the device from the power supply (pull the plug!).

**Caution:** Do not spray the device with water when it is still connected to the power supply: **Electric shock hazard!**

### 1.3 Proper use

The operational safety of the device is assured only in case of proper use, according to the operation manual.

All technical activities like installation and maintenance must be performed by the qualified service personnel only.

**The device is not designed for continuous operation in the industrial applications.**

The device is intended for home use or in similar places such as:

- in kitchens for store or office employees or in similar business areas;
- in agricultural farms;
- by guests of hotels, motels and other typical places of accomodation;
- in Bed and Breakfast facilities.

**The ceramic grill plate** is intended only for **grilling meat, fish and vegetables** directly on the grilling surface or in appropriate GN containers.



#### **CAUTION!**

**Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.**

**Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.**

**The operator is liable for all damages resulting from inappropriate use.**



## 2. General information

### 2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



#### **CAUTION!**

**Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!**

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

### 2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



#### **NOTE!**

**The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.**

### 2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

### 3. Transport, packaging and storage

#### 3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

#### 3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



**If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.**

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

#### 3.3 Storage


Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- do not store outdoors,
- keep it dry and dust-free,
- do not expose it to aggressive media,
- do not expose it to direct sunlight,
- avoid mechanical shocks and vibration,
- in case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly, if required refresh or renew.

## 4. Technical data

### 4.1 Overview of parts

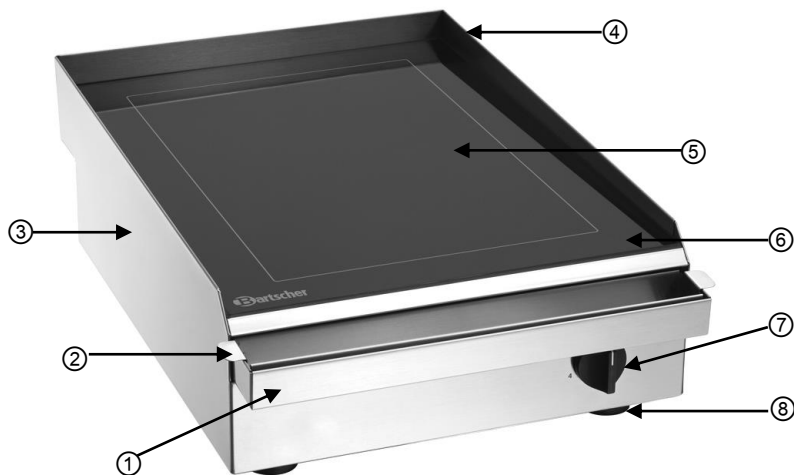

- ① Drippings tray handle
- ② Drippings tray
- ③ Housing
- ④ Splatter shield
- ⑤ Grilling surface
- ⑥ Ceran plate
- ⑦ Temperature dial
- ⑧ Feet

## 4.2 Technical specification

Name	Ceran ceramic grilling plate GP2500
Code-No.:	<b>370030</b>
Construction:	housing: chrome-nickel steel 18/10, grilling surface: glass
Power:	2.5 kW / 230 V~ 50 Hz
Temperature regulation:	5-level regulation
Temperature range:	50 °C - 300 °C
Dimensions:	W 420 x D 605 x H 175 mm
Ceran plate:	W 395 x D 535 mm
Grilling surface:	W 290 x D 450 mm
Weight:	10.1 kg

We reserve the right to make technical changes!

## 5. Installation and operation

### 5.1 Installation

#### Positioning

- Unpack the device and remove all package materials according to the valid environment protection regulations.



#### **CAUTION!**

**Never remove the nameplate and warning signs from the device.**

- Put the device on an even, stable, dry and waterproof surface which is resistant to high temperature.
- **Never** place the device on an inflammable surface.
- **Never** place the device at the edge of a table to avoid tilting or falling.
- **Never** put the device in a moist or wet area.

- Do not place the device near open flame, electric heaters or other heat source.
- Keep a distance of at least 10 cm from walls or other flammable objects.
- Place the device so that the plug is easily accessible so as to quickly disconnect the device if the need arises.

## Connection



### **DANGER! Electric shock hazard!**

**The device can cause injuries due to improper installation! Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!**

- The power supply circuit with the socket must be protected by the fuse of at least 16A. Connect the device directly to a single grounded socket. Do not use any power bar or multiple socket.


## 5.2 Operation

### Before first use

- Before first use, clean the device using warm water and a mild cleaning agent. Rinse with clean water to remove leftover cleaning substances. Dry the device thoroughly.
- Mount the drippings tray at the front of the device.
- Connect the device to single grounded outlet.
- Heat the device for approx. 5 minutes without food products **at the 5<sup>th</sup> temperature level**. During the first heating the device may emit smoke, which is not hazardous and will not occur during future use.
- Turn the device off (set temperature regulator to “0”) and leave it to cool.

## Temperature regulation

- The temperature dial is used for regulating temperature.
- Set the temperature by turning the temperature dial clockwise to the desired position. The illustration below shows the various options for temperature regulation:

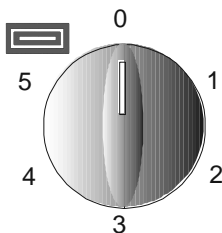

- 0** - (OFF)
- 1** - Temperature for maintaining warmth (approx. 90 °C)
- 2** - Low temperature (approx. 140 °C)
- 3** - Medium temperature (approx. 200 °C)
- 4** - High temperature (approx. 250 °C)
- 5** - Highest temperature (approx. 300°C)

- Before each use, preheat the Ceran plate on the **5th temperature level** for approx. 3 minutes.
- Place food products for grilling directly onto the grilling surface



**HOT SURFACE! Danger of burns!**

**The grilling surface gets hot quickly and remains hot for some time after being turned off. To avoid burns, do not touch the grilling surface!**

## Tips for preparing food

The Ceran ceramic grilling plate is intended for grilling food products with a small amount of fat or none at all. It is a healthy way to prepare meat, fish and vegetables. It also saves time and energy, and eliminates the need to wash cookware.



**CAUTION!**

**Do not place pots or pans on the grilling surface, as they may shatter the glass.**

- The practical 3-sided splatter shield around the Ceran plate prevents splattering of grease or juices from food products.
- The useable grilling surface is marked by the white line. Heat is evenly distributed over this area.
- Before placing food products on the grilling surface, coat it with a small amount of cooking oil. Use oil with a high level of heat resistance, such as rapeseed or sunflower seed oil.
- Fatty meats require smaller amounts of oil; for fish and vegetables, more oil can be placed on the grilling surface. By adding oil, you can prevent food from sticking to the grilling surface or from scorching.



- After grilling, remove the remains of food products using the ceran scraper to lead it to the drippings tray at the front of the device.
- Regularly remove and empty the drippings tray. Wash it as needed, and replace it in the device.



## CAUTION!

**Never use the device without the drippings tray.**

- To avoid the taste and aroma of one food product transferring to another, remove any remains from the grilling surface before grilling the next food products.
- Grill in the following order: meat or fish, then vegetables.
- To braise food products or to retain their natural juices and aroma, use aluminium foil.
- When grilling, avoid the use of sugars or liquids containing sugar. If sugar is necessary, wrap the food product in aluminium foil.



## NOTE!

**If sugar, syrup or other substances get onto the grilling surface, remove them carefully using the Ceran ceramic plate scraper before the grilling surface cools: food remains (especially sugar and syrup) are difficult to remove when cool.**

- You may use grilling utensils for preparing food products (tongs, spoons, etc.), but they cannot be made of artificial materials. **Never place plastic containers onto a hot grilling surface.**
- **Never** use a knife to cut food products when placed on the grilling surface, as this may lead to scratches.
- After reducing the temperature, the Ceran ceramic grilling plate may be used to keep food products warm.
- When the device is to remain unused, set the temperature dial to "0" and remove the plug from its socket.

## 6. Cleaning



### **WARNING!**

**Before cleaning, disconnect the device from the power supply (unplug!) and leave to cool off.**

**The device is not suited for direct washing via water jets.  
Protect the device from the water penetration.**

- Before cleaning, turn the device off by setting the temperature dial to "0" and remove the plug from its socket.
- Wash the housing and grilling surface regularly using warm water, a mild cleaning agent and a soft cloth. Dry all washed surfaces thoroughly.
- Remove stubborn remains of food products with a wet sponge and heat the device at its highest setting for a few minutes. Turn the device off and remove the remains with a Ceran ceramic plate scraper.
- After removing the drippings tray and handle from the device, clean it regularly using a mild cleaning agent and soft cloth.
- Always use soft cloths, **never** harsh scrubbers that may scratch the device.
- After cleaning, dry the device's surface and polish it using a dry cloth.



## Storing the device

- If the device is not used for a long time, clean it according to the above description and store in a dry, clean place, protected against cold, sun and, children.  
Do not place any heavy objects on the device.

## 7. Waste disposal

### Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



### **WARNING!**

**To exclude any abuse and the dangers involved make the waste device unfit for use before disposal.**

**For that purpose disconnect device from mains supply and remove mains connection cable from the device.**



### **CAUTION!**



**For the disposal of the device please consider and act according to the national and local rules and regulations.**

Bartscher GmbH  
Franz-Kleine-Str. 28  
33154 Salzkotten  
Germany

phone: +49 (0) 5258 971-0  
fax: +49 (0) 5258 971-120