

DIG, 25L, 900W, Grill, HL



610835

ENGLISH

Table of contents

1. Safety 36
1.1 Key to symbols 36
1.2 Safety instructions 37
1.3 Proper use 43

2. General information 44
2.1 Liability and Warrantees 44
2.2 Copyright protection 44
2.3 Declaration of conformity 44

3. Transport, packaging and storage..... 45
3.1 Delivery check 45
3.2 Packaging..... 45
3.3 Storage..... 45

4. Technical data 46
4.1 Overview of parts 46
4.2 Technical specification 48

5. Installation and operation..... 49
5.1 Installation 49
5.2 Guidelines for cooking with the microwave oven 50
5.3 Suitable dishes for use in the microwave oven..... 51
5.4 Operation..... 52

6. Cleaning 66

7. Possible Malfunctions 67

8. Waste disposal 68

Bartscher GmbH
Franz-Kleine-Str. 28
33154 Salzkotten
Germany

phone: +49 5258 971-0
fax: +49 5258 971-120
Service-Hotline: +49 5258 971-197
www.bartscher.com



Read this instruction manual before using and keep them available at all times!

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

1.1 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



WARNING!

This symbol highlights hazards which could lead to injury.



WARNING!

This symbol highlights dangerous situations which could lead to injury or death.



HOT SURFACE!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!



CAUTION!

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



NOTE!

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

1.2 Safety instructions

- The device can be used by children 8 years and up, as well as by people with disabilities and those with limited experience/knowledge as long as they are under supervision or have been instructed on proper use of the device and its possible dangers. Children should not play with the device. Cleaning and maintenance cannot be performed by children younger than 8 years old and must be done under supervision. Children under the age of 8 years old must be kept away from the device and its power cord.
- **Never** leave the device unattended when in use.
- Only use the device indoors.
- The device must be operated in correct and safe technical condition only. In case of operational problems disconnect the device from the power supply (pull the plug from the socket) and contact the service company.
- Never use the device **without the rotating plate nor without food products** inside. The device may be damaged.

- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements. **Suffocation hazard!**
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.



DANGER! Electric shock hazard!

To avoid effects of this risk, follow the safety instructions presented below:

- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled. Never place the device or other objects on the power cable.
- Do not cover the cable. Keep away the cable from operating range.

- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.
- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the **electric shock hazard** will occur.
- Never immerse the appliance, the power cord and the power plug in water or other liquids.
- Do not use any acid agents and make sure no water ingresses the device.
- **Never** operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
 - when the device is not used,
 - in case of anomalies during operation,
 - before cleaning.



WARNING! Microwave radiation hazard!

Exposure to microwave radiation may cause bodily injury.

To avoid effects of this risk, follow the safety instructions presented below:

- Do not turn the microwave oven on when the door is open, as an excess of damaging electromagnetic waves may be emitted by the device. **Never change the safety locks!**

- It is extremely important to not damage the door and that it can be closed properly. Example of damage to the door which may be unsafe include the following:
 1. warping and indentations,
 2. cracked and/or properly secured hinges and screws,
 3. damaged door seals,
 4. cracked glass pane,
 5. Damaged elements of the safety lock system
- The space between the door and the device must be free of foreign objects.
- Door seals must be tight and clean, as dirt and damage may allow electromagnetic waves to escape from the microwave oven. Take care to prevent buildup of any residues (e.g. cleaning agents, dust, grease, etc.).



HOT SURFACE! Burn hazard!

To avoid effects of this risk, follow the safety instructions presented below:

- The surface of the device may become very hot. Do not touch the hot surface of the device.
- Do not place any objects on the device.
- Do not place the microwave oven over the hob plate or any other device which generates heat because the microwave oven may be damaged due to the high temperature in which case the guarantee may be voided.



WARNING! Burn hazard!

To avoid effects of this risk, follow the safety instructions presented below:

- Do not fry any food products in the device. Hot oil can lead to skin burns or damage the device.
- Food products prepared in the device are heated unevenly. Also containers are usually hotter than the food products inside. **Carefully check the temperature of food products, in particular those prepared for children. Risk of burns!**
- During the heating of liquids in the microwave oven it is possible that the liquid may reach boiling temperature without externally visible bubbling. For this reason, special care must be taken when handling the container. Even a light bump, e.g. when removing the liquid from the device, may lead to spillage. **Risk of burns!**
- For that reason avoid using tall, narrow containers with a thin neck.
- Place a spoon (only in exceptional cases use a metallic one) or glass stirrer in the beverage, then place the dish in the center of the rotating plate. Stir the liquid prior to heating and after half the heating time has elapsed. After heating: wait for a moment, carefully stir the liquid, then remove from the cooking chamber.
- **As food prepared in the microwave is heated unevenly, the contents of children's bottles must be mixed thoroughly - optimally by shaking - then, before giving the bottle to the child, check the temperature of the food. Risk of burns! Prior to heating food remove the bottle cap and nipple!**



WARNING! Fire or explosion hazard!

To avoid the effects of this risk, follow the safety instructions presented below.

- Never heat any flammable objects in the device.
- Do not prepare any food products which contain alcohol.
- Do not place any objects inside the device (cookbooks, sponges, etc.). Sudden activation of the device can cause damage to such objects, and even burn them.
- When heating or cooking food products in containers from flammable materials such as plastic or paper, remain near the device as there is a risk of the device overheating.
- If objects in the device catch fire, leave the door closed, turn the device off and remove the plug from its socket OR flip the main circuit breaker switch.
- Do not use metallic pots, pans or covers. Metal may lead to sparks in the cooking chamber. Use only dishes resistant to high temperatures, designed for use in microwave ovens (see sec. 5.3 „Suitable dishes for use in the microwave oven“).

Risk of fire!

- Do not prepare food products and beverages in closed or sealed containers. Such containers may crack inside the device or injure the user when being opened!
- Do not use the device for preparation of fresh or hard-boiled eggs, either in shell or peeled, as eggs may explode.
- Food products with thick skins, such as potatoes, pumpkins, apples or chestnuts, should be pierced prior to heating.
- Do not place solutions inside containing water, oil or grease, as such a mixture may explode.

1.3 Proper use

The operational safety of the device is assured only in case of proper use, according to the operation manual.

All technical activities like installation and maintenance must be performed by the qualified service personnel only.

The device is not designed for continuous operation in the industrial applications.

The device is intended for home use or in similar places such as:

- in kitchens for store or office employees or in similar business areas;
- in agricultural farms;
- by guests of hotels, motels and other typical places of accomodation;
- in Bed and Breakfast facilities.

The microwave oven is intended only for preparation, heating and defrosting of food products using appropriate dishes.

The microwave oven cannot be used for:

- industrial and laboratory purposes;
- storage of kitchen utensils and dishes;
- drying paper, textiles and other flammable materials;
- heating of fluids and/or flammable materials, substances damaging to health, and substances easily vaporizing and/or other similar materials.



CAUTION!

Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.

Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.

The operator is liable for all damages resulting from inappropriate use.

2. General information

2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



CAUTION!

Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage


Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- do not store outdoors,
- keep it dry and dust-free,
- do not expose it to aggressive media,
- do not expose it to direct sunlight,
- avoid mechanical shocks and vibration,
- in case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly, if required refresh or renew.


4. Technical data

4.1 Overview of parts

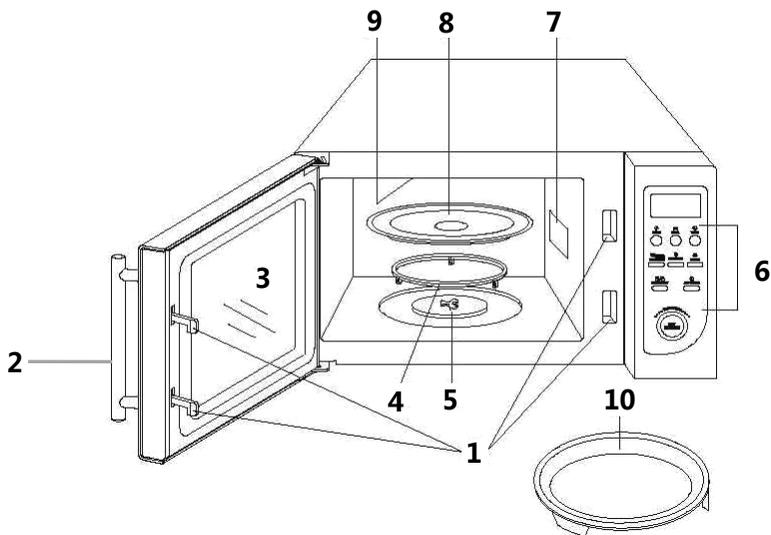

- 1** Safety lock system
- 2** Door handle
- 3** Glass door
- 4** Rotating ring
- 5** Rotating plate drive
- 6** Control panel
- 7** Ventilation holes
- 8** Rotating plate
- 9** Grill heater
- 10** Grill pan

Control panel

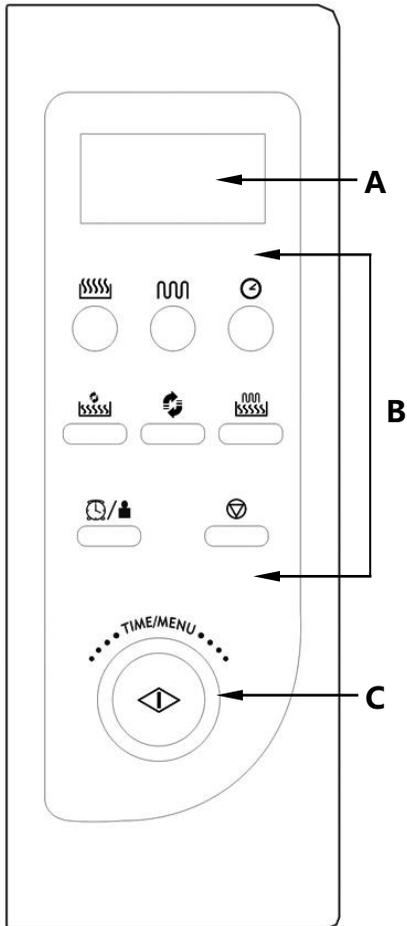

A - LED display

B - Function buttons

	Microwave
	Grill
	Timer
	Microwave + convection
	Convection
	Microwave + Grill
	Timer / weight
	Stop / Reset

C - Time / Menu dial

Start button

4.2 Technical specification

Name	Microwave oven DIG, 25L, 900W, Grill, HL
Code-no.:	610835
Material:	Housing and cooking chamber: stainless steel; rotating plate: glass
Realization:	<ul style="list-style-type: none">▪ Functions:<ul style="list-style-type: none">- heating- defrosting- grill (can be combined)- hot air (can be combined)▪ Control unit:<ul style="list-style-type: none">- electronic- toggle- knob▪ LED display
Microwave output:	900 W
Output:	hot air: 1950 W; grill: 1000 W
Power levels:	10
Digital timer:	to 95 minutes
Power:	1.4 kW / 230 V 50 Hz
Content:	25 litres
Dimensions:	chamber: W 320 x D 315 x H 200 mm exterior: W 483 x D 422 x H 281 mm rotating plate: Ø 270 mm
Weight:	16.6 kg
Includes:	grill pan, Ø 275 mm, H 50 mm, detachable handle

We reserve the right to make technical changes!

5. Installation and operation

5.1 Installation

Positioning

- Unpack the device and remove all package materials according to the valid environment protection regulations.



CAUTION!

Never remove the nameplate and warning signs from the device.

- Place the device on a flat, stable surface which can support the weight of a microwave oven.
- Do not place the device near flammable materials, avoid high temperatures, moisture and high humidity.
- **Never** place the device on a flammable surface.
- To ensure proper functioning, the device must have sufficient ventilation. For this reason, it is necessary to maintain the following **safe distances** (see figure below):
 - **above the device: 20 cm**
 - **at rear of device: 10 cm**
 - **at sides of device: 5 cm.**
- **Never** block the ventilation holes. **Never** disassemble the device's feet.
- The device must maintain a **minimum distance of 2 m** from radios, television sets, etc. in order to avoid interference with the signal reception.
- Position the devices so that the plug is easily accessible and if necessary can be easily removed from its socket.

Connection



DANGER! Electric shock hazard!

The device can cause injuries due to improper installation! Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!

- The power supply circuit with the socket must be protected by the fuse of at least 16A. Connect the device directly to a single grounded socket. Do not use any power bar or multiple socket.

5.2 Guidelines for cooking with the microwave oven

Instead of traditional heat sources, a microwave oven applies an electron lamp which emits electromagnetic waves. These waves, like radio waves, are invisible but their effects can be observed. Such waves can pass through materials such as glass, porcelain, artificial materials and paper. As these materials do not contain water, grease or oil, they are not heated by the microwaves. Simply put, the microwaves directly reach the food product, causing molecules of water, grease and oil to vibrate; friction results in the creation of heat which is used for defrosting, heating or cooking. During cooking with microwaves, heat remains inside the product being prepared, in opposition to the processes of boiling or grilling in which heat enters the food from the outside. If the device is not damaged, energy created by the microwaves remains inside the device and does not pose a threat to the user.

- Carefully place food products to be cooked inside the microwave oven, with larger pieces at the outer edges.
- Remember the cooking time. It is best to at first set the shortest possible time and then lengthen cooking time as necessary. Excessive cooking time may cause the food product to smoke or catch fire.
- Cover food products during cooking. This will ensure even cooking and prevent splattering.
- Turn food products over while cooking. This will speed up the process of cooking such products as chicken or hamburgers. Large products, such as a roast, should be turned over at least once.
- Such dishes as dumplings should, after half of the cooking time has elapsed, be turned over, moved from the top to bottom, moved from the outside to the inside, etc.

5.3 Suitable dishes for use in the microwave oven

1. Check that a dish is suitable to be used in a microwave oven.

Test: place the empty dish together with a glass of water, then heat at the highest power level for 60 seconds. **Never switch the device on when empty or with only an empty container inside.** An appropriate dish will be lukewarm. If the dish is hot, it is not appropriate for use in the microwave oven.

2. Proper materials for dishes for the microwave oven allow microwaves to pass through. Energy goes through the container and heats the food product.
3. Do not use metallic containers or containers containing metallic parts (e.g. gold strips around the edge of a plate). Microwaves do not pass through metal.
4. Do not use products from recycled materials, as they may contain small pieces of metal. If such containers are used, sparks and even fire may result.
5. Dishes of oval and round shapes should be used, as food products cook more quickly in the corners of square-shaped containers.
6. Wide, flat containers are best suited to use in the microwave oven as compared to narrow and tall ones. Food products cook evenly in flat dishes.
7. To avoid food from baking onto the edge of dishes, you may cover the edges with thin strips of aluminum foil. Do not use too much aluminum foil, and leave a minimum distance of 2.5 to 3.0 cm between the foil and walls of the microwave oven's cooking chamber.
8. The table below will help you in selecting the proper dishes:

Dishes for cooking	Usable in microwave ovens	Usable for grilling	Convection	Combination*
Tempered baking glass	yes	yes	yes	yes
Glass not resistant to high temperature	no	no	no	no
Tempered porcelain	yes	yes	yes	yes
Plastic dishes suitable for use in microwave ovens	yes	no	no	no
Kitchen paper	yes	no	no	no
Metal tray / bowl	no	yes	yes	no
Metal rack	no	yes	yes	no
Aluminum foil & foil containers	no	yes	yes	no

*Combination: „microwave + grill“ and „microwave + convection“


5.4 Operation

Washing prior to first use

- Prior to first use it is necessary to wash the device, so that remnants of packing materials do not impact the taste of food products.
- Empty the cooking chamber.
- Wash the interior and exterior of the device with a soft, moist cloth and dry thoroughly.
- Leave the door open so that the cooking chamber can dry out thoroughly.
- The rotating ring, glass tray and grill pan with moving handle should be washed regularly with a small amount of washing-up liquid or in a dishwasher.

General tips for use

- Place the rotating ring (4) into the depression at the bottom of the cooking chamber.
- Place the rotating plate (8) with the grooved side at the bottom, on the bottom of the cooking chamber, and turn until the plate locks into the tray drive (5).

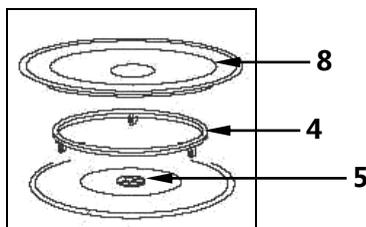

- Prior to turning the microwave oven on, check that the rotating plate (8) and rotating ring (4) are properly installed. The cooking chamber must be clean; the rotating ring (4) must be located in the depression; the rotating plate (8) must be secured to the tray drive (5).
- Place the dish with food product on the rotating plate. Nothing should extend beyond the edge of the rotating plate. **Do not** heat / cook food products placed directly on the rotating plate. In the event of heating / cooking larger quantities of food cut into pieces, ensure they are evenly distributed throughout the dish used for cooking and that they do not touch one another.



CAUTION!

Never activate the device without the rotating plate and a container for food products, nor without food products!

- Close the door to the device and check that the seals are clean, and that the door closes properly.
- Set the desired operating mode, power level and cooking time (see below), and turn the device on.
- The cooking chamber lights up, and the glass turning plate rotates. Remember that the turning plate must always be able to rotate freely.



CAUTION!

If the device is set to a high power level, keep it under constant observation! In the event of strange noises, food products swelling, or liquids churning, reduce the power level!

Settings

- When changing settings, rapidly press the buttons two times. If this is not done, the device will automatically interrupt the setting process.
- If the settings are accepted, the device will confirm this with an audible signal.
- A double signal means the device has not accepted the settings entered. Check the settings and attempt to enter them again.

Deleting settings

- If you wish to delete settings prior to cooking, press the button marked **Stop/Reset** .

Interrupting or finishing a function

- To pause the device, press the button marked **Stop/Reset**  or open the door.
- To reactivate the device, close the door and then press the button marked **Start** .
- If you wish to complete the cooking process, press for a second time the button marked **Stop/Reset**  to delete all commands.

End program

- At the end of a program a signal is sounded. The display will read „END“. You may remove food products from the microwave oven.



WARNING! Danger of burns!

Dishes used for cooking may be very hot, as heat is emitted from the food product. Use protective gloves or a towel when removing dishes.

- After cooking food products with large amounts of water, leave the door to the device cracked open to allow the cooking chamber to dry out.

Setting clock

1. Press and hold for a min. 3 seconds the button marked  / . The display will read „12H“.
2. Turn the **Time / Menu** dial until the proper hour is displayed.
3. To confirm, press  / .
4. Turn the **Time / Menu** dial until the proper minutes are displayed.
5. To confirm, press  / .



NOTE!

While cooking, the current time can be checked by pressing  / .

Cooking using microwave function

- This function is ideal for preparing one-pot dishes, soup, sauces, meat without crunchy skin, steamed fish, side dishes (rice, potatoes, starchy foods) and hot drinks.
- For this mode the control panel can be used to set the cooking time and power with which the microwave is to heat or cook food products.

- Set the power level by using the button marked . The table below indicates the power levels. The first column shows how many times to press the button marked  to set the desired power level, and the second shows the power proportion and programs. The third column shows the relative power level.
- Set the desired cooking time using the **Time / Menu** dial. The maximum cooking time is 95 minutes.
- After setting the power level and cooking time, press **Start** .

Press 	Power (%) – display reading in parentheses	Relative power level
1 time	100 % (P-HI)	high
2 times	90 % (P-90)	
3 times	80 % (P-80)	
4 times	70 % (P-70)	medium high
5 times	60 % (P-60)	
6 times	50 % (P-50)	medium
7 times	40 % (P-40)	
8 times	30 % (P-30)	medium low/defrost
9 times	20 % (P-20)	
10 times	10 % (P-10)	Low
11 times	0 % (P-00)	

Example:

If you wish to heat a food product for 5 minutes at 60% power, proceed as follows:

1. Press  **5 times**.
2. Turn the **Time / Menu** dial until the display shows the desired cooking time (5:00).
3. Press **Start** .

Important information

- If you wish to interrupt the cooking process, press **Stop/Reset**  **1 time**.
- After pressing **Start**  again, cooking will be reactivated.

- If you press **Stop/Reset**  **2 times**, all cooking settings will be reset.
- If cooking has finished, a signal will be heard 4 times and the display will show „END“.
- To remove the „END“ communiqué and activate other functions, press **Stop/Reset**  or open the door.
- While cooking, the power level may be checked by pressing  .

Setting the time

- To use the time function, press  and use the **Time / Menu dial** to set the desired time. This function is available in Standby mode and in microwave cooking mode.

Example:

If you wish to set the timer for 5 minutes, proceed as follows:

1. Press  **1 time**.
2. Turn the **Time / Menu dial** until the desired time is displayed (5:00).
3. Press **Start** .

Important information

- The maximum time that can be set is 95 minutes.
- The time set can be checked by pressing .
- To remove the time communiqué, press , then **Stop/Reset** .

Grilling

Cooking using the grilling function is ideal for preparing thinly sliced meats, steaks, cutlets, kebabs, sausage and chicken. This function is also good for preparing hot sandwiches, toasts and casseroles.

Example:

If you wish to set the grilling function to operate for 12 minutes:

1. Check that all settings have been deleted and the device is ready to receive new settings.
2. Press .
3. Turn the **Time / Menu** dial until the desired time is displayed (12:00).
4. Press **Start** .

Important information:

- The grill is factory programmed at the highest power level. Maximum grilling time is 95 minutes.

Convection cooking

- When the convection cooking function is activated, hot air is circulated inside the device, which quickly and evenly browns food products and makes them crispy. The device can be set to ten different cooking temperatures and cooking time up to 9 hours and 30 minutes.
- Convection cooking is ideal for baking pound cakes, cookies, sponge cakes, crusty cakes, soufflés, and pastas.

Cooking using convection function

- Set the cooking temperature by using the button marked .
- A list of temperature level settings is presented in the table below. The left column shows the number of times to press the button marked  to set the desired power. The right column displays the temperature.

Press 	Temperature (approx. °C)
1 time	200
2 times	190
3 times	180
4 times	170
5 times	160
6 times	150
7 times	140
8 times	130
9 times	120
10 times	110

- The desired cooking time is set using the **Time / Menu** dial.

Example:

If you wish to cook at 180°C for 40 minutes, proceed as follows:

1. Press  3 times.
2. Turn the **Time / Menu** dial until the display shows the desired cooking time (H:40).
3. Press **Start** .

Remember:

- The maximum cooking time is 9 hours and 30 minutes. After cooking is finished, an audible signal will be made and repeated 4 times, and the display will read „END“.

- To remove the „END“ communiqué and activate other functions, press **Stop/Reset**  or open the device's door.
- While cooking, the temperature can be checked by pressing .

Heating and cooking using convection function

- The microwave oven can be programmed to combine the heating function with convection function.

Example:

If you wish to heat a food product to 160°C, then cook for 1 hour and 30 minutes, proceed as follows:

1. Press  **5 times** to select the desired temperature.
2. Press **Start** . When the device reaches the temperature previously set, a signal will sound and the display will read „PREH“.
3. Open the door and place the container with the food product in the center of the rotating glass plate.
4. Turn the **Time / Menu** dial until the display shows the proper cooking temperature (1H:30).
5. Press **Start** .

Microwave + Grill

- The combination of microwave and grill allows you to both cook and crisp the exterior of the food product. Cooking time is also shortened.
- This function is ideal for casseroles, meat, poultry, baked potatoes and toasts.
- This function allows for the selection of **two combinations**, in which the proportion of time for grilling and microwave cooking is programmed. First, set the total cooking time, then select the grilling/microwave cooking combination. The proportion of the two functions are then automatically divided.
- First, press  **1 or 2 times** to choose the proper combination for the food product to be prepared, then turn the **Time / Menu** dial to set the desired cooking time, which is then displayed.
- To begin cooking, press **Start** .

Important information:

- Maximum cooking time is 95 minutes. After cooking is finished, a signal is sounded 4 times, then the display reads „**END**“.
- During cooking, the program selected can be checked by pressing .

Combination 1

30 % microwave cooking, 70% grilling:

for fish, potatoes and baked dishes (casseroles).

Example:

If you wish to select combination 1 for 25 minutes, proceed as follows:

1. Press  1 time.
2. Turn the **Time / Menu** dial until the display shows the desired time (25:00).
3. Press **Start** .

Combination 2

55 % microwave cooking, 45 % grilling:

For puddings, omelets, baked potatoes and poultry.

Example:

If you wish to select combination 2 for 12 minutes, proceed as follows:

1. Press **Stop/Reset** .
2. Press  2 times.
3. Turn the **Time / Menu** dial until the display shows the desired time (12:00).
4. Press **Start** .

Microwave + convection

- This mode with convection and microwave cooking is ideal for preparing:
 - baked dishes with a large amount of water
 - thick cuts of meat
 - deep-frozen baked goods
 - cakes with a large amount of water
- The device has four factory-programmed settings to ease automatic cooking both with the convection and microwave cooking functions.

To select the temperature for hot air, press  .

Display reading	Press 	Temperature (approx. °C)
COMB1	1 time	200
COMB2	2 times	170
COMB3	3 times	140
COMB4	4 times	110

Example:

If you wish to bake a cake (baking time - 26 minutes) using COMB3.

1. Press  **3 times**.
2. Turn the **Time / Menu** until the desired cooking time is displayed.
3. Press **Start** .

Important information:

- The maximum cooking time is 9 hours and 30 minutes. After cooking is finished, an audible signal will be made and repeated 4 times, and the display will read „**END**“.
- To remove the „**END**“ communiqué and activate other functions, press

Stop/Reset  or open the device's door.

- The air temperature can be checked during cooking by pressing  .

Defrosting

- Microwave energy only heats the exterior of a food product, then the heat slowly works itself into the interior of the food product, which causes even defrosting.

Example:

If you wish to defrost a product for **5 minutes**:

1. Turn the **Time / Menu** dial counter-clockwise, until the display reads „**A-09**“ and „**CODE**“.
2. Press  / .
3. Turn the **Time / Menu** dial until the desired defrosting time is displayed (5:00).
4. Press **Start** .

Note: The device stops after the elapse of 2/3 of the set time. The food products defrost by absorbed heat. Check the food products and continue defrosting, if necessary, by pressing again the **Start button** .

Important information:

- For cooking of both prepared and raw frozen products, apply the following rule: approx. 5 minutes per pound. For example, 5 minutes of defrosting for 1 pound of frozen spaghetti sauce.
- Open the device from time to time and remove or separate defrosted portions. If the frozen food product does not defrost during the set time, set the device to defrost for a few additional minutes until the entire product has defrosted.
- Prior to defrosting, remove the product from its package and place it on a plate.
- Defrost a product packed in a plastic container until it is possible to remove it from the container, then place it on a dish that is designed for use in a microwave oven.
- The maximum defrosting time is 45 minutes. After the set time has expired, a signal will sound 4 times and the display will read „**END**“.
- Before activating another cooking program, remove the „**END**“ communiqué by pressing **Stop/Reset**  or opening the door.
- **While defrosting** proceed in accordance with **the following instruction**:

➤ **Covering**

Food products should be covered, in order to:

- quicken their heating,
- avoid drying out,
- avoid splattering of grease in the cooking chamber,

Exceptions: bread, baked goods, breaded food products and products which are supposed to be crunchy should not be covered.

➤ **Turning over / mixing**

Practically all food products should be turned over and/or mixed at least once during defrosting. Sticky pieces of food should be separated as quickly as is possible.

➤ **Smaller portions**

Smaller portions defrost more evenly and quicker than larger ones. For this reason, divide food products into smaller pieces prior to defrosting. An entire meal can thus be quickly and easily prepared.

➤ **Delicate foods**

Delicate foods such as pate / cakes, cream, cheese or bread should be only partially defrosted, and the defrosting process should be finished at room temperature. In this manner you will avoid a situation where the food is too hot on the outside while still frozen on the inside.


➤ **Leaving dishes out**

The time for leaving dishes out following defrosting is very important, as it guarantees continuation of the defrosting process. After defrosting, the defrosted food product should be cooked as soon as possible. Do not re-freeze defrosted food products.

Sequential cooking

The device allows you to select up to three programs to operate in sequence. DEFROSTING should be selected before cooking.

If you wish to select the cooking program displayed below, the device must be programmed in the following order:

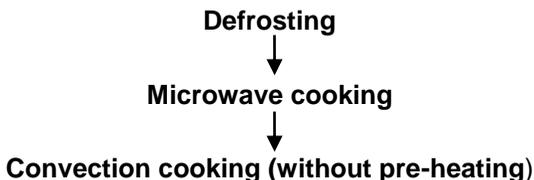

1. Turn the **Time / Menu** dial counter-clockwise until the display reads „**A-09**“ and „**CODE**“.
2. Press  / .
3. Turn the **Time / Menu** dial to set defrosting time (5 minutes).

4. Press  to set the power level.
5. Turn the **Time / Menu** dial to set the cooking time.
6. Press  to set the air temperature for convection cooking.
7. Turn the **Time / Menu** dial to set the cooking time.
8. Press **Start** .

Auto-Menu

„**Auto-Menu**“ follows the automatic cooking or heating of food products without needing to set the power level or cooking time. It is enough to know the type of product and its weight.

1. In Standby mode, turn the **Time / Menu** dial counter-clockwise and choose the desired program (see list below).
2. Press  /  until the proper weight has been selected.
3. Press **Start** .

Code for food product		Press  / 						
A-01	Potatoes (230g)	1 time	2 times	3 times				
A-02	Beverages (200ml portion)	1 time	2 times	3 times				
A-03	Popcorn (99g)	Pre-programmed cooking time is displayed						
A-04	Heating	1 time (200g)	2 times (300g)	3 times (400g)	4 times (500g)	5 times (600g)	6 times (700g)	7 times (800g)
A-05	Pasta	1 time (100g)	2 times (200g)	3 times (300g)				
A-06	Pizza	1 time (150g)	2 times (300g)	3 times (450g)				
A-07	Chicken	1 time (800g)	2 times (1000g)	3 times (1200g)	4 times (1400g)			
A-08	Cake (475g)	Pre-programmed cooking time is displayed						
A-09	Defrosting	See page 62						

Important information:

- It is necessary to enter the product's weight for the cooking time to be set.
- For programs **A-03** (Popcorn) and **A-08** (cake) the cooking time can be changed if the pre-programmed time is not appropriate.
- To reset cooking time:
 1. Press  /  **2 times**.
 2. Turn the **Time / Menu** dial until the desired cooking time is displayed.
 3. To confirm, press **Start** .
- The new cooking time will be stored in the device's memory and applied every time the function is selected, until a new cooking time is set.
- When using program **A-07** (chicken) stop the device during cooking to turn the food product around. Next, close the device door and press **Start**  to continue cooking.

Remaining functions

1. CHILD SAFETY BLOCK

The child safety block makes it impossible for young children to operate the device.

Activating the child safety block:

- Press and hold for 3 seconds the button marked **Stop/Reset** . A signal will sound and the control light will come on. When the block is activated, the device will not respond to any commands.

Deactivating the child safety block:

- Press and hold for 3 seconds the button marked **Stop/Reset** . A signal will sound and the control light will go off.

2. QUICK START

This function is for easy programming for cooking at 100 % power.

- Quickly press **Start**  several times to set the cooking time.
- Maximum cooking time is 10 minutes.
- The device will automatically come on after 2 seconds.

3. AUTOMATIC SAFETY MECHANISM

If the temperature inside the microwave oven reaches 300°C, the safety function is activated. The display reads „E01“ and a signal sounds. To return the device to normal functioning, press button **Stop/Reset** .

If the device detects a power surge the safety function is activated and the display reads „E03“. Until the button marked **Stop/Reset**  pressed, a signal will sound. The device is equipped with a **cooling system**. If the device has been functioning longer than 2 minutes, a ventilator will come on for approx. 3 minutes to cool the cooking chamber.

6. Cleaning



WARNING!

Before cleaning disconnect the device from the power supply (pull the plug out the socket!).

Do not use pressurized water jest for cleaning!

Protect the device from the water penetration.

Important tips

- Clean the device regularly. If the device is not kept clean, this may affect the durability of the device and has a negative impact on its operation and lead to accumulation of fungi and bacteria.
- Immediately remove any remnants of food and beverages from the walls of the internal chamber of the device with a moist cloth. If you wait too long, the cleaning may become difficult and in extreme cases not possible at all. Excessive contamination may lead to damaging of the device.
- Do not use hard and sharp objects to remove dry dirt.
- Avoid using sprays and other aggressive cleaning agents (e.g. oven cleaners), as such chemicals may leave stains or even damage the surface of the device.

Cleaning

- Wipe the interior walls and bottom of the cooking chamber with warm water and soft cloth.
- Clean the exterior surface with a moist cloth. To protect the parts located inside the device from damage do not allow water to seep through the ventilation holes into the interior of the device.
- Clean the door, door seals and other adjacent elements with a moist cloth to remove the entire dirt. Do not use any aggressive cleaning agents.
- Do not get the control panel overly wet. Clean it with a soft, moist cloth. Do not close the door while cleaning the control panel to avoid accidental switching the device on.
- The rotating ring, glass tray and grill pan with moving handle should be washed regularly with a small amount of washing-up liquid or in a dishwasher.
- If condensation forms on the inside or outside of the door, remove it with a soft cloth. The condensation forms when the microwave oven is operated in high humidity environment. This is a normal occurrence.
- Unpleasant odours can be removed from the device by placing a glass of water with lemon juice and lemon peel in a container designed for use in microwave ovens and heating it for approx. 5 minutes. Afterwards, wipe the device thoroughly with a soft, dry cloth.
- When cleaning use only soft cloths and **never** use scouring pads which may scratch the surface of the device.
- After cleaning the device, wipe its surface dry and polish with a soft, dry cloth.

Storing the device

- If the device is not used for a longer time, clean the device according to the above mentioned instructions and store it in a dry, clean place protected against frost, sun and children. Do not place any heavy objects on the device.

7. Possible Malfunctions

If the microwave oven fails to function:

1. Check that it has been properly plugged in. Remove the plug from its socket and wait approx. 10 seconds, then reinsert it into the socket.
2. Check that a circuit breaker or the main circuit has not been disconnected. If they are functioning properly, check the connection using other electronic appliances.
3. Check that the door is closed properly (safety lock). If it is not, to ensure safety microwaves will not be formed inside the cooking chamber.

If you cannot remove the malfunctions:

- do not open the body,
- notify the customer service point or contact the sales agent, while providing the following information:
 - type of malfunction;
 - article and serial number (rating plate at the rear of the device);
 - date of purchase.

8. Waste disposal

Old devices



The electric devices are marked with this symbol. You must not dispose of electric devices with household waste. When the device may not be longer used each consumer is obliged to dispose of the device at the dedicated local collection point, separately from household waste.



NOTE!

Electric devices should be used and disposed of properly to prevent the impact on the environment.

- Disconnect the device from the power supply and remove the power cord from the device.

Bartscher GmbH
Franz-Kleine-Str. 28
33154 Salzkotten
Germany

phone: +49 5258 971-0
fax: +49 5258 971-120
Service-Hotline: +49 5258 971-197
www.bartscher.com