

## Rechaud 5



**120803**

**ENGLISH**

**Table of contents**

<b>1. Safety .....</b>	<b>16</b>
1.1 Safety instructions .....	16
1.2 Key to symbols .....	19
1.3 Proper use .....	20
<b>2. General information .....</b>	<b>21</b>
2.1 Liability and Warrantees .....	21
2.2 Copyright protection .....	21
2.3 Declaration of conformity .....	21
<b>3. Transport, packaging and storage.....</b>	<b>22</b>
3.1 Delivery check .....	22
3.2 Packaging.....	22
3.3 Storage.....	22
<b>4. Technical data .....</b>	<b>23</b>
4.1 Overview of parts .....	23
4.2 Technical specification .....	24
<b>5. Installation and operation.....</b>	<b>24</b>
5.1 Installation .....	24
5.2 Operation.....	25
<b>6. Cleaning .....</b>	<b>27</b>
<b>7. Waste disposal .....</b>	<b>28</b>

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

phone: +49 (0) 5258 971-0  
fax: +49 (0) 5258 971-120



**Read this instruction manual before using and keep them available at all times!**

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

## 1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

### 1.1 Safety instructions

- The device is not intended for use by individuals (including children) with physical or mental disabilities, insufficient experience, and/or insufficient knowledge unless such persons are under the care of a person responsible for their safety or have received instructions regarding appropriate use of the device.
- Children should be observed to ensure that they are not playing with the device.
- **Never** leave the device unattended when in use.
- Only use the device indoors.
- The device is not adapted for use with an external timer or remote control.

- This device may only be operated in technically proper and safe condition.
- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements. **Suffocation hazard!**
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.



**DANGER! Electric shock hazard!**

To avoid the hazard results please follow the safety instructions below.

- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled. Never place the device or other objects on the power cable.
- Do not lay the power cable over carpets or other inflammable materials. Do not cover the cable. Keep away the cable from operating range and do not immerse it into water.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the **electric shock hazard** will occur.
- Never immerse the appliance, the power cord and the power plug in water or other liquids; do not put it under running water and clean any parts of the appliance in the in the dishwasher.
- Do not use any acid agents and make sure no water ingresses the device.
- **Never** operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
  - when the device is not used,
  - in case of anomalies during operation,
  - before cleaning.



## **HOT SURFACE! Burn hazard!**

To avoid the effects of this risk, follow the safety instructions presented below.

- The surface the device is very hot when in use. Do not touch the hot surface with bare hands. When removing hot plates, always use the handles and wear protective gloves.
- Even after switching off the device is hot for some time, allow the device to cool down sufficiently, before you clean it or move to another place.

## 1.2 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



**WARNING!**

*This symbol highlights hazards which could lead to injury.*



**WARNING!**

*This symbol highlights dangerous situations which could lead to injury or death.*



**HOT SURFACE!**

*This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!*



**CAUTION!**

*This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.*



**NOTE!**

*This symbol highlights recommendations and information aimed for effective and trouble-free device operation.*

## 1.3 Proper use

The operational safety of the device is assured only in case of proper use, according to the operation manual.

All technical activities like installation and maintenance must be performed by the qualified service personnel only.

**The hot plate unit** is intended for **maintaining the temperature of food** on heated aluminum plates.



### **CAUTION!**

**Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.**

**Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.**

**The operator is liable for all damages resulting from inappropriate use.**

## 2. General information

### 2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



#### **CAUTION!**

**Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!**

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

### 2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



#### **NOTE!**

**The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.**

### 2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.



## 3. Transport, packaging and storage

### 3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

### 3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



#### NOTE!

**If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.**

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

### 3.3 Storage


Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- Do not store outdoors.
- Keep it dry and dust-free.
- Do not expose it to aggressive media.
- Do not expose it to direct sunlight.
- Avoid mechanical shocks and vibration.
- In case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly.  
If required refresh or renew.

## 4. Technical data

### 4.1 Overview of parts

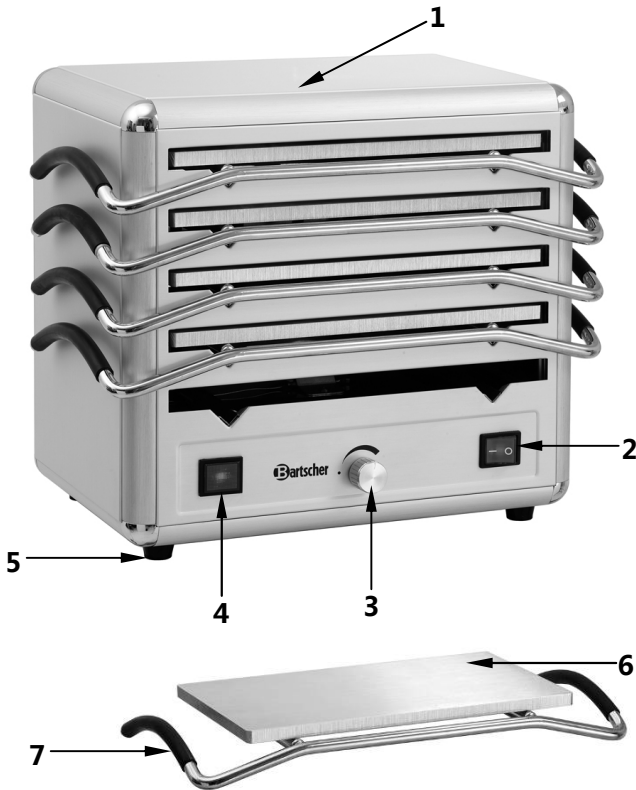

- 1 Casing
- 2 **ON/OFF** switch with integrated standby light (red)
- 3 Temperature dial, ungraded
- 4 Function mode control light (green)
- 5 Feet
- 6 Heating plate
- 7 Hot plate handle

## 4.2 Technical specification

<b>Name</b>	<b>Hot-plate unit 5</b>
Article no.:	<b>120803</b>
Construction:	aluminum
Power:	850 W / 230 V 50/60 Hz
Hot plates:	5
Hot plate dimensions:	W 280 x D 165 mm
Dimensions:	W 380 x D 250 x H 320 mm
Weight:	15.4 kg

We reserve the right to make technical changes!

## 5. Installation and operation

### 5.1 Installation

#### Positioning

- Unpack the device and remove the packing material.



#### **CAUTION!**

➤ **Never** remove the nameplate and warning signs from the device.

- Put the device on an even, stable, dry and waterproof surface which is resistant to high temperature.
- **Never** put the device in a moist or wet area.
- **Never** place the device on an inflammable surface.
- Do not place the device near open flame, electric heaters or other heat source.
- **Never** place the device at the edge of a table to avoid tilting or falling.
- Place the device so that the plug is easily accessible so as to quickly disconnect the device if the need arises.

## Connection



### **DANGER! Electric shock hazard!**

**The device can cause injuries due to improper installation!**

**Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!**

**Connect the device only to properly installed single socket with protective terminal.**

- The electrical circuit in the socket must be secured to at least 16A. Only connect the device directly to the wall socket; do not use any extension cords or power strips.

## 5.2 Operation

- Clean the appliance before first use according to instructions in Section 6 „Cleaning“.
- After washing and drying, place all hot plates inside the device.
- Connect the device to an appropriate single outlet.
- Turn the device on using the **ON/OFF** switch. The red standby light will come on.
- Set the desired temperature using the dial. The green function mode control light will come on.
- Preheating time for the hot plates is approx. 40 minutes.
- After such time passes, the hot plates are heated and dishes may be placed on them.
- The hot plates may easily be removed and used separately.



### **HOT SURFACE!**

**The device's surface is very hot when in use.**

**Do not touch the hot surface with bare hands.**

**When removing hot plates, always use the handles and wear protective gloves.**

- Place warm food in an appropriate container on the heating plate. The light metal alloy of the hot plate possesses excellent heat retention capacity, and dishes on the plate will remain warm for long periods.



## **CAUTION!**

**The hot plate is not intended for direct contact with food. Use appropriate containers (plates, bowls, etc.).**

- Prior to placing dishes on the hot plate, ensure that it is on a flat and level surface to avoid sliding off.



## **CAUTION!**

**Never move the hot plate with dishes on it – remove dishes from the plate first!**

- Before any scheduled break in operation, switch off the device with **ON/OFF** switch setting it at “**O**” and disconnect the device (unplug!).

## 6. Cleaning



### CAUTION!

**Before cleaning, set the ON/OFF switch at “O” and disconnect the device from the mains (unplug!). Let the device cool down.**

**The device is not designed to be rinsed with running water.**

**Do not use a pressure washer to clean the device!**

**Be careful and do not let the water into the device.**

- Wash the device regularly.
- Clean the surface of the device with a soft, moist cloth.
- Clean the hot plates with a soft, moist cloth. If needed, a delicate cleaning agent may be used. Dry thoroughly after cleaning.
- **Never** use abrasive or bleaching substances, nor ones containing alcohol.
- Use only soft cloths for cleaning the device. **Never** use wire brushes which may scratch the surface.
- After washing, dry and polish the device's surface with a soft, dry cloth.

### Storing the device

- If the device is not used for a longer time, clean the device according to the above mentioned instructions and store it in a dry, clean place protected against frost, sun and children. Do not place any heavy objects on the device.

## 7. Waste disposal

### Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



#### **WARNING!**

**To exclude any abuse and the dangers involved make the waste device unfit for use before disposal. For that purpose disconnect device from mains supply and remove mains connection cable from the device.**



#### **CAUTION!**



**For the disposal of the device please consider and act according to the national and local rules and regulations.**

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

phone: +49 (0) 5258 971-0  
fax: +49 (0) 5258 971-120