



601176

Bedienungsanleitung
Partybank, klappbar

D/A/CH

Instruction manual
Party bench, folding

GB/UK

Mode d'emploi
Banc pliable «Party»

F/B/CH

Manuale di utilizzo
Panchina «Party», piegabile

I/CH

Instrucciones de uso
Banco «Party», plegable

E

Manual de instruções
Banco Party, dobrável

P

Gebruiksaanwijzing
Partybank, inklapbaar

NL/B

Brugsanvisning
„Party” sammenfoldelig bænk

DK

Инструкция по эксплуатации
Скамья „Party”, складная

RUS

Kullanma kılavuzu
“Party” bank, katlanır

TR

Instrukcja obsługi
Ławka „Party”, składana

PL

Návod k obsluze
Skládací lavice „Party”

CZ

Upute za upotrebu
Sklopiva klupa „Party”

HR

Használati útmutató
„Party” pad, összehajtható

H

Οδηγίες χρήσης
Πάγκος «Party», πτυσσόμενος

GR

Technical information:

Name:	• "Party" folding bench
Article number:	• 601176
Material:	• seat: plastic, frame: lacquered steel
Dimensions:	• W 1830 x D 296 x H 440 mm
Weight:	• 11.0 kg

Properties


Makes a perfect pair with the Bartscher "multi-table" (art. no. 601170)!

- **Stable plastic surface:** stain-resistant, easy-to-clean polyethylene.
- The party bench is equipped with a **compact storage system and carrying handle** for easy storage and transport.
- **The secure locking system** ensures the party bench is safe and stable.
- UV protection.
- The party bench has a capacity of approx. **250 kg** when the load is distributed evenly.


Setting up the party bench

- o Unpack the party bench and remove all packing material.

- Place the party bench on a level surface.
- Open the party bench lock and unfold the bench.

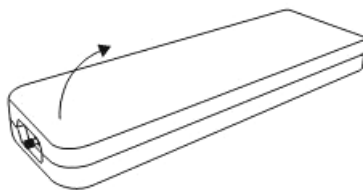

- Put all of the bench legs in an upright position.
- Slide the steel bench leg stabilization ring and lock the bench legs.
- Turn the party bench over and place it in its proper position.

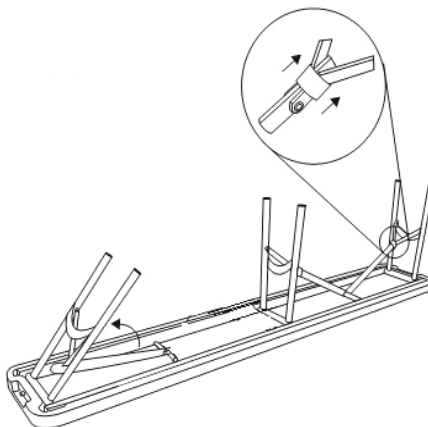

Important instructions



WARNING!

FAILURE TO HEED THE FOLLOWING WARNINGS CAN RESULT IN INJURIES:

- **Never stand on the party bench.**
- **Do not place hot objects directly on the bench's surface.**
- **The party bench should be stored in either a vertical or horizontal position on a flat surface, without being pressed or pressured by other objects.**

Cleaning

- The party bench should be washed with a mild cleaning agent and a soft, moist cloth.
- For tougher dirt, a special substance for cleaning plastics can be used.
- **Never** use harsh or abrasive cleaning substances that could damage the bench's surface.

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120