

700-400 | 700-800 | 700-1200



285200 - 285201 - 285203

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0
Fax: +49 5258 971-120
Service hotline: +49 5258 971-197
www.bartscher.com

Version: 1.0

Date of preparation: 2024-01-29

Original Installation Instructions

Technical data

Name:	Kitchen rail 700-400
Art. No.:	285200
Material:	stainless steel
Designed for:	Series 700
Device width, in mm:	400
Max. load-bearing capacity, in kg:	15
Depth of the surface for placing objects, in mm:	75
Dimensions (W x D x H), in mm:	400 x 200 x 80
Weight, in kg:	3,1

As an accessory, the kitchen rail 285200 fits the following appliances:

2851121	Gas stove	2855061	Grill plate
287410	Electric kitchen	2855071	Grill plate
286102	Electric kitchen	2856211	Volcanic lava grill
286411	Induction kitchen	286917	Deep fryer
284804	Work element	2859171	Deep fryer
286301	Bain-marie	2859251	Deep fryer
286710	Multi pan	286628	Warm-keeping appliance
286506	Grill plate	286305	Pasta brewer
286507	Grill plate	2853051	Pasta brewer

Name:	Kitchen rail 700-800
Art. No.:	285201
Material:	stainless steel
Designed for:	Series 700
Device width, in mm:	800
Max. load-bearing capacity, in kg:	15
Depth of the surface for placing objects, in mm:	75
Dimensions (W x D x H), in mm:	800 x 200 x 80
Weight, in kg:	4,7

As an accessory, the kitchen rail 285201 fits the following appliances:

2851051	Gas stove	284007	Work element
2851241	Gas stove	286302	Bain-marie
2851271	Gas stove	286508	Grill plate
2851251	Gas stove	286509	Grill plate
287420	Electric kitchen	2855081	Grill plate
287431	Electric kitchen	2855051	Grill plate
286104	Electric kitchen	2856311	Volcanic lava grill
286225	Electric kitchen	286922	Deep fryer
286326	Electric kitchen	2859271	Deep fryer
286234W	Electric kitchen	286310	Pasta brewer
286421	Induction kitchen	2853101	Pasta brewer

Name:	Kitchen rail 700-1200
Art. No.:	285203
Material:	stainless steel
Designed for:	Series 700
Device width, in mm:	1200
Max. load-bearing capacity, in kg:	15
Depth of the surface for placing objects, in mm:	75
Dimensions (W x D x H), in mm:	1200 x 200 x 80
Weight, in kg:	6,3

We reserve the right to implement technical modifications.

As an accessory, the kitchen rail 285203 fits the following appliances:

2851161	Gas stove	286106	Electric kitchen
2851361	Gas stove	286302	Electric kitchen
2851261	Gas stove	286508	Electric kitchen
2851371	Gas stove		

EN

Intended Use

Equipping the 700 series appliances with a kitchen rail is not only a stylish finishing touch, but also offers optimization in terms of safety and functionality. Increasing distance from an appliance effectively reduces the risk of burns from contact with high-temperature zones. In addition, the sturdy design ensures that pots, pans and plates can be stored comfortably.

Scope of Delivery / Part Name

1. Unpack the kitchen rail and remove all packing materials pursuant to environmental regulations.
2. Check completeness of delivery according to the list below:

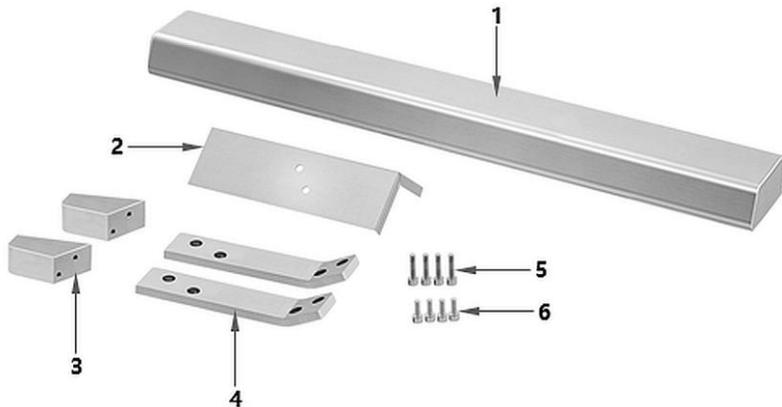


Fig. 1

1. Rail-shelf
2. Template for drilling holes
3. Counter-bracket (2 pcs)
4. Steel flat bar, bent (2 pcs)
5. Hexagonal socket head screw, M6 x 30 mm (4 pcs)
6. Hexagonal socket head screw, M6 x 20 mm (4 pcs)

NOTE!

Tools needed: 5 mm hex key

Assembly

1. In order to install a kitchen rail, for example, for a gas stove, you must first remove the grates, burner cover, burners and cooking basin.

NOTE!

If it is not a gas stove, it is necessary to remove the cover.



Fig. 2



Fig. 3



Fig. 4

2. Drill the necessary holes in the appliance.
3. To this end, put the supplied template for drilling holes on the edges of the appliance, moving from the outside, and slide it until it stops.
4. Now, drill the holes (2 at the left-hand side and 2 at the right-hand side) at the locations indicated with the template.

5. Next, connect the flat bars from the outside to the counter-bolts inside the housing, using four short M6 hexagonal socket head screws.

Initially, tighten the screws only lightly to make it easier to install and level the rail-shelf.

6. Then put the rail-shelf on the flat bars.
7. Screw the rail-shelf to the flat bars with long M6 hexagonal socket head screws.

Also, these screws should only be lightly tightened at first.



Fig. 5

8. Now level the rail–shelf.

The kitchen rail is properly installed when it ends flush with the corners and top edge of the housing.

9. Tighten all eight screws thoroughly.

Cleaning

ATTENTION!

For cleaning, do not use any scouring agents containing solvents nor corrosive cleaning agents. They may damage the surface.

EN

1. Clean the kitchen rail regularly with warm water and a soft, damp cloth. Use a mild cleaning agent when required.
2. Dry the kitchen rail with a soft cloth.