

IF-92



300323

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

Technical Support Hotline: +49 5258 971-197

www.bartscher.com



Version: 3.0

Date of preparation: 2022-04-22

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words	2
1.2	Safety instructions.....	3
1.3	Intended Use	5
1.4	Unintended Use	5
2	General information	6
2.1	Liability and Warranty	6
2.2	Copyright Protection	6
2.3	Declaration of Conformity	6
3	Transport, Packaging and Storage	7
3.1	Delivery Check.....	7
3.2	Packaging	7
3.3	Storage	7
4	Technical Data.....	8
4.1	Technical Specifications	8
4.2	List of Components of the Appliance	9
4.3	Functions of the Appliance.....	9
5	Installation and operation	10
5.1	Installation.....	10
5.2	Operation	13
6	Cleaning	15
6.1	Safety Instructions for Cleaning	15
6.2	Cleaning.....	15
7	Disposal.....	16



Read this instruction manual before using and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance. Additionally, accident prevention, occupational health and safety, and legal regulations in force in the area the appliance is used apply.

Before you start using the appliance, especially before turning it on, read this instruction manual in order to avoid personal injuries and property damages. Improper use may cause damage.

This instruction manual forms an integral part of the product and must be stored in an immediate vicinity of the appliance and be available at all times. The instruction manual should be transferred together with the appliance.

1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.

- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Flammable Materials

- Never subject the appliance to contact with high temperature sources, e.g.: oven, furnace, open flame, heat generating devices, etc.
- To avoid fire hazard, clean the appliance regularly.
- Do not cover the appliance with, e.g., aluminium foil or cloths.
- Use the appliance only with materials designated to this end and with correct temperature settings. Materials, groceries and left-overs remaining in the appliance may catch fire.
- Never use the appliance near flammable or inflammable materials, e.g.: petrol, spirit, alcohol, etc. High temperature triggers evaporation of these materials, and, as a result of contact with sources of ignition, an explosion may occur.
- In case of fire, disconnect the appliance from the power supply before attempting suitable fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.

EN

Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

Operating personnel

- This appliance is not intended to be used by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.

Safety

- Children should be supervised to ensure that they are not playing with or switching the appliance on.

1.3 Intended Use

As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.

The following is an intended use:

- For use in living areas, restaurants, hotels and offices.

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Using outdoors, in barns, stables and similar buildings.

2 General information

2.1 Liability and Warranty

All information and instructions in this instruction manual account for legal regulations in force, current level of technical engineering knowledge as well as our expertise and experience, developed over the years. If special models or additional options are ordered, or state-of-the-art technical solutions were implemented, the actual scope of delivery of the appliance may, in some circumstances, differ from descriptions and numerous drawings in this instruction manual.

The manufacturer is not liable for any damages nor faults stemming from:

- failure to observe instructions,
- unintended use,
- technical alterations introduced by the user,
- usage of unapproved spare parts.

We reserve the right to introduce technical modifications to the product, intended for improvement of the appliance and its performance.

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

EN

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Name:	Insect trap IF-92
Art. No.:	300323
Material:	steel, painted
Effective radius, in m:	9
Light output:	1 x 20 W
Connected load:	0,02 kW 220-240 V 50/60 Hz
Adhesive film dimensions (W x D), in mm:	320 x 180
Dimensions (W x D x H), in mm:	450 x 175 x 160
Weight, in kg:	1,4

We reserve the right to implement technical modifications.

EN

Version / Characteristics

- Version: wall mounting
- Insect killing method: adhesive film
- Light: UV-A fluorescent lamp
- The set includes:
 - 1 adhesive film
 - attachment material

4.2 List of Components of the Appliance

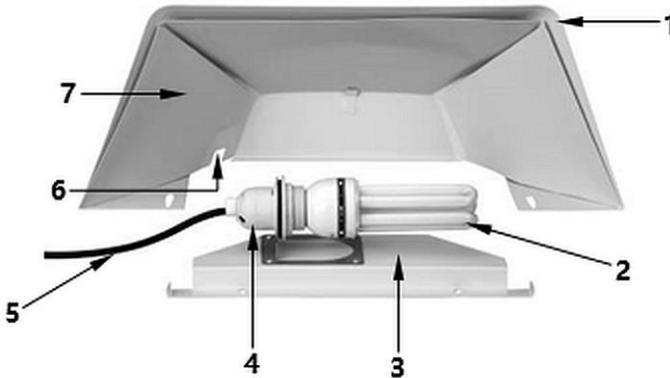


Fig. 1

1. Lampshade
2. Fluorescent lamp
3. Holder
4. Lamp fitting
5. Power cord
6. Power cord opening
7. Adhesive film

EN

4.3 Functions of the Appliance

Insects are lured by UV light and stick to the adhesive film located on the lampshade.

Accessories (not included in the scope of delivery)



Adhesive film IF-92

- 1 box (5 adhesive films)
- Dimensions: W 320 x D 180 x H 1 mm
- Weight: 0.03 kg

Art. No.: 300326



20 W UV-A fluorescent lamp

- Light output: 20 W / UV-A
- Dimensions: W 150 x D 70 x H 40 mm
- Weight: 0.1 kg

Art. No.: 300328

5 Installation and operation

EN

5.1 Installation

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing package materials, for instance: plastic bags and EPS.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels fixed on the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- The appliance should be placed on surfaces that are:

Installation and operation

- even, with sufficient bearing capacity, resistant to water, dry and resistant to high temperatures;
 - sufficiently large, and thus enabling usage of the appliance with no problems;
 - easily accessible;
 - well ventilated.
- Install the appliance as far as possible from zones, where people are present.
 - Do not place any easily flammable liquids, gases or any other flammable objects near the appliance.
 - In a room, hang the appliance in an area, where insects converge, but not in places, where draughts or wind may be present (windows, doors).
 - If possible, place the appliance at the height of 1.5–2 meters, in a semi-shaded area.

Wall Mounting

1. The appliance is designed for wall mounting. Use the enclosed fixing material.
2. Use the factory default bores (a) in the holder with the lamp fitting to mark 2 bore hole points on the wall.
3. Bore 2 holes in the wall in marked points.
4. Insert pins and studs in the bored holes.
5. Hang the holder on them.

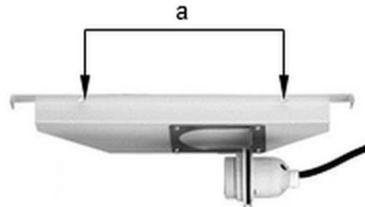


Fig. 2

6. Screw the included fluorescent lamp into the fitting.



Fig. 3

7. Place the delivered adhesive film in the lampshade so that it is clamped behind the tab at the bottom area.
8. Remove protective film from the adhesive film.



Fig. 4

9. Hang the lampshade on the designated hook on the holder.
10. Pay attention how the cord is routed; pull the power cord through the opening in the lampshade.



Fig. 5

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.

5.2 Operation

Indications and Tips

- Do not use the appliance in bright light, as it deteriorates its efficiency.
- Before switching on other sources of light in a room, first switch the insect trap for 10–20 minutes.
- We recommend using it for 24 hours. Repeated switching the appliance on and off shortens the life of the fluorescent lamp.

Before Use

1. Before use, clean the appliance observing instructions in section 6 'Cleaning'.
2. Then dry the appliance thoroughly.

Appliance Connection

1. Plug the appliance into a suitable single socket.

The appliance is equipped with 1 UV-A fluorescent lamps, with output of 20 W. When the plug is inserted in the socket, it lights up blue.



HAZARD!

Electric shock hazard!

Disconnect the appliance from the power supply (pull the plug out) and wait for it to cool down before you start replacing the fluorescent lamp and adhesive film.

UV-A Fluorescent Lamp Replacement

When the fluorescent lamp of the insect trap is damaged, it may be easily replaced with a new UV-A fluorescent lamp (**Bartscher art. No. 300328**).

When replacing, follow the instructions:

- remove the lampshade, to get access to the fluorescent lamp;
- screw the fluorescent lamp for replacement out and remove it from the fitting;
- put the new UV-A fluorescent lamp (Bartscher art. No. 300328) in the fitting;
- hang the lampshade anew on the holder with the lamp fitting;

- now, connect the appliance to a power source.

Replacement of Adhesive Films

NOTE!

Due to hygienic reasons, replace the adhesive film in regular intervals.

When replacing, follow the instructions:

- remove the lampshade and remove the adhesive film;
- place a new adhesive film and remove the protective film;
- fix the lampshade anew on the holder with the lamp fitting;
- switch the appliance on as usual.

Switching the Appliance Off

1. If the appliance is not to be used, disconnect the appliance from the power supply (pull the plug out).

Storing the Appliance

1. If the appliance is to remain unused for a prolonged period of time, remove the used adhesive film from the appliance.
2. Clean the appliance observing indications in Section 6 '**Cleaning**'.
3. Store the appliance in a dry, clean place, not subject to frost nor direct sunlight, and away from the reach of children. Do not place any heavy objects on the appliance.

6 Cleaning

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

6.2 Cleaning

1. During the period of using the appliance, it must be cleaned daily.
2. Remove the adhesive film.
3. Wipe the lampshade with a soft, damp cloth.
4. Thoroughly dry the lampshade.
5. Clean UV-A fluorescent lamps regularly, as even a thin layer of dust weakens the light beam power.
6. Remove the UV-A fluorescent lamp from the fitting.
7. Wipe thoroughly with a soft, damp cloth.
8. Dry the UV-A fluorescent lamp thoroughly.

CAUTION!

Due to safety reasons, the UV-A fluorescent lamp should be installed in the appliance only when it is completely dry.

7 Disposal

Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.

Fluorescent lamps (energy-saving lamps)

Fluorescent lamps (energy-saving lamps) must be disposed of separately. Please refer to local recycling centre.