



190128

ENGLISH

Table of contents

1. Safety	16
1.1 Safety instructions	16
1.2 Key to symbols	19
1.3 Intended use	20
2. General information	21
2.1 Liability and Warrantees	21
2.2 Copyright protection	21
2.3 Declaration of conformity	21
3. Transport, packaging and storage.....	22
3.1 Delivery check.....	22
3.2 Packaging	22
3.3 Storage.....	22
4. Technical data	23
4.1 Overview of parts	23
4.2 Technical information	24
5. Installation and operation.....	24
5.1 Installation	24
5.2 Operation	25
6. Cleaning	27
7. Waste disposal	28

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120



Read this instruction manual before using and keep them available at all times!

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

1.1 Safety instructions

- The device can be used by children **8 years and up**, as well as by people with disabilities and those with limited experience/knowledge as long as they are under supervision or have been instructed on proper use of the device and its possible dangers. **Children should not play with the device. Cleaning and maintenance cannot be performed by children. Children under the age of 8 years old must be kept away from the device and its power cord.**
- **Never** leave the device unattended when in use.
- Only use the device indoors.
- The device is not adapted for use with an external timer or remote control.

- This device may only be operated in technically proper and safe condition.
- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements. **Suffocation hazard!**
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.



DANGER! Electric shock hazard!

To avoid the hazard results please follow the safety instructions below.

- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled. Never place the device or other objects on the power cable.
- Do not lay the power cable over carpets or other inflammable materials. Do not cover the cable. Keep away the cable from operating range and do not immerse it into water.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the **electric shock hazard** will occur.
- Never immerse the appliance, the power cord and the power plug in water or other liquids; do not put it under running water and clean any parts of the appliance in the in the dishwasher.
- Do not use any acid agents and make sure no water ingresses the device.
- **Never** operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
 - when the device is not used,
 - in case of anomalies during operation,
 - before cleaning.



HOT SURFACE! Burn hazard!

To avoid the effects of this risk, follow the safety instructions presented below.

- During the operation the housing of the device becomes very hot. Do not touch it with bare hands. In order to remove the container from the base and to open the container use the lever on the lid.
- After the device has been switched off it remains hot for some time. Before cleaning, leave it to cool off.

1.2 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



WARNING!

This symbol highlights hazards which could lead to injury.



WARNING!

This symbol highlights dangerous situations which could lead to injury or death.



HOT SURFACE!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!



CAUTION!

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



NOTE!

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

1.3 Intended use

Safe operation is only guaranteed when using the device for its intended purpose.

Any technical interventions, as well as assembly and maintenance are to be made by a qualified customer service only.

The device is not suitable for continuous commercial use.

The device is intended for home use or in similar places such as:

- in kitchens for store or office employees or in similar business areas;
- in agricultural farms;
- by guests of hotels, motels and other typical places of accomodation;
- in Bed and Breakfast facilities.

The milk frother is intended only for preparing foamed milk or heating milk.



CAUTION!

Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.

Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.

The operator is liable for all damages resulting from inappropriate use.

2. General information

2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



CAUTION!

Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



NOTE!

If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage

 
Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- Do not store outdoors.
- Keep it dry and dust-free.
- Do not expose it to aggressive media.
- Do not expose it to direct sunlight.
- Avoid mechanical shocks and vibration.
- In case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly.
If required refresh or renew.

4. Technical data

4.1 Overview of parts

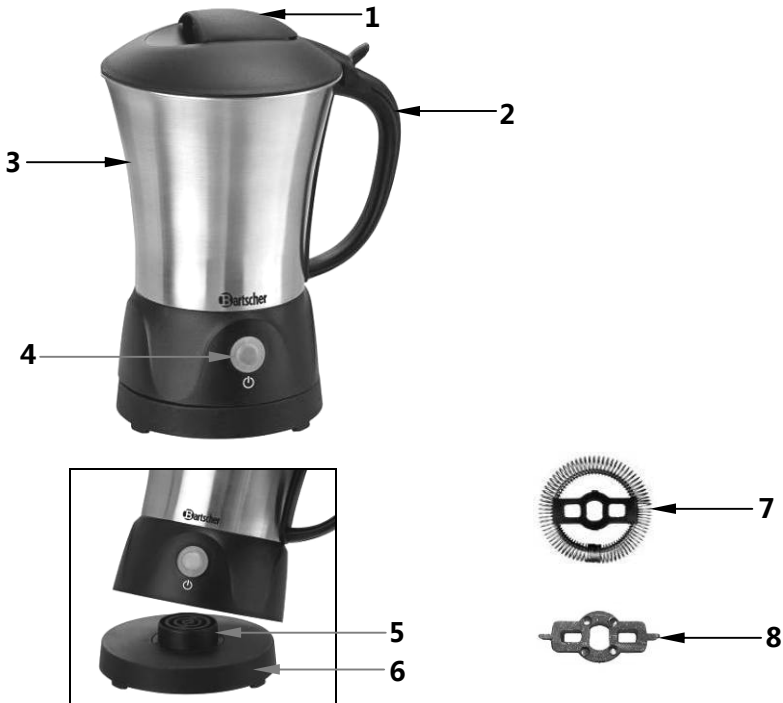

- 1** Lid
- 2** Handle
- 3** Container
- 4** **ON/OFF** button
- 5** Lower controller
- 6** Base
- 7** Milk frothing whisk
- 8** Hot milk whisk

4.2 Technical information

Name	Milk frother
Code-no.:	190128
Material:	body: plastic, inside the container: coated with teflon
Volume:	800 ml
Temperature range:	0 °C – max. 75 °C
Power:	550 W / 230 V 50 Hz
Dimensions:	W 155 x D 216 x H 226 mm
Weight:	0.85 kg

We reserve the right to make technical changes!

5. Installation and operation

5.1 Installation

Positioning

- Unpack the device and remove the packing material.



CAUTION!

➤ **Never** remove the nameplate and warning signs from the device.

- Put the device on an even, stable, dry and waterproof surface which is resistant to high temperature.
- **Never** place the device on an inflammable surface.
- **Never** place the device at the edge of a table to avoid tilting or falling.
- **Never** put the device in a moist or wet area.
- Do not place the device near open flame, electric heaters or other heat source.
- Place the device so that the plug is easily accessible so as to quickly disconnect the device if the need arises.

Connection



DANGER! Electric shock hazard!

The device can cause injuries due to improper installation!

Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!

Connect the device only to properly installed single socket with protective terminal.

- The electrical circuit in the socket must be secured to at least 16A. Only connect the device directly to the wall socket; do not use any extension cords or power strips.

5.2 Operation

- Wash the device thoroughly prior to first use (see **section 6 „Cleaning”**).
- Place the device's base on a table. The table surface must be temperature resistant, dry, flat and stable.
- Place the container on the base so that the lower controller is inserted into the appropriate openings in the base.



Frothing milk

 
- Open the plastic lid and mount the milk frothing whisk (7) to the bottom of the container.



NOTE!

It is not necessary to heat the milk thanks to the integrated heating function.

- Pour fresh, cold milk into the container, up to the **lower „MAX” marking 1, fig. on the right.**

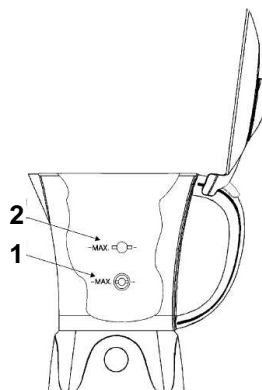

- Plug the device into a grounded socket.
- Press the **ON/OFF** switch. The control light at by button will come on.
- The milk inside the container will be stirred and heated. The device will automatically turn itself off after 90 seconds.



 
HOT SURFACE!

When in use the container is very hot. To avoid burns, never touch the container with bare hands. To remove the container from the base, hold it by the handle.

- After the device goes off, the frothed milk is ready.

Heating milk

- Fix the hot milk whisk (8) to the bottom of the container.
- Pour fresh, cold milk into the container, up to the **upper „MAX” marking 2, fig. on the right.**
- Plug the device into a grounded socket.
- Press the **ON/OFF** button. The control light by the button will come on.
- The milk in the container will be stirred and heated.
- If the device will not be used further, disconnect it by removing the plug from its socket.

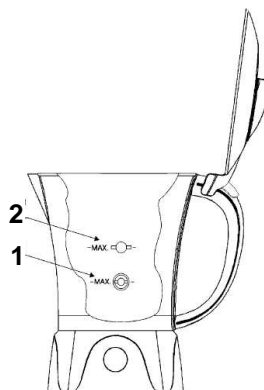

6. Cleaning



CAUTION!

**Disconnect the device from the power supply (unplug!) before cleaning.
Let the device cool down.**

The device is not designed to be rinsed with running water.

Do not use a pressure washer to clean the device!

Be careful and do not let the water into the device.

- Wash the device regularly.
- Remove the device's plug from its socket prior to washing. Leave the device to cool.
- For easier washing, remove the whisks and lid from the container. Wash these elements in warm water with a washing-up liquid. Rinse under running water in order to remove all washing-up liquid.
- Pour a small amount of warm water into the container after each use. This water prevents any remaining milk and other substances from drying and sticking to the Teflon coating. This makes it easier to wash the device, and during the next use helps to avoid scorching of such substances.
- Use a **soft** brush or sponge for washing the container. After washing, rinse under running water.
- **Never** wash the container in a dishwasher, as it contains electrical parts that may be damaged if wet!



DANGER! Hazard via electrical current!

Never immerse the container in water or other liquids.

There is a danger of electric shock.

- Wash the base with a soft, moist cloth. Ensure no water gets into the lower controller.
- Use only soft cloths, **never** use harsh cleaners that may damage the device's surface and interior Teflon coating.
- After washing, dry the surface of the device and polish with a soft, dry cloth.

7. Waste disposal

Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



WARNING!

To exclude any abuse and the dangers involved make the waste device unfit for use before disposal. For that purpose disconnect device from mains supply and remove mains connection cable from the device.



CAUTION!



For the disposal of the device please consider and act according to the national and local rules and regulations.

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120