

„Bartscher Deli“



306053 / 306054 / 306055

ENGLISH
Translation
of the original instruction manual

Table of contents

1. Safety 16
 1.1 Safety instructions 16
 1.2 Key to symbols 18
 1.3 Hazard sources 19
 1.4 Proper use 20

2. General information 21
 2.1 Liability and Warrantees 21
 2.2 Copyright protection 21
 2.3 Declaration of conformity 21

3. Transport, packaging and storage 22
 3.1 Delivery check 22
 3.2 Packaging 22
 3.3 Storage 22

4. Technical data 23
 4.1 Overview of parts 23
 4.2 Technical specification 24

5. Installation and operation 25
 5.1 Installation 25
 5.2 Operation 26

6. Cleaning 26

7. Waste disposal 28

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120



Read this instruction manual before using and keep them available at all times!

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

1.1 Safety instructions

- This device may only be operated in technically proper and safe condition.
- The device is not intended for use by individuals (including children) with physical or mental disabilities, insufficient experience, and/or insufficient knowledge unless such persons are under the care of a person responsible for their safety or have received instructions regarding appropriate use of the device.
- Children should be observed to ensure that they are not playing with the device.
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device.
Do not attempt to repair the device yourself.

- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.
- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled.
- Never place the device or other objects on the power cable.
- Do not lay the cable over carpets or heat insulations. Do not cover the cable. Keep away the cable from operating range and do not dunk it into water.
- Inspect the power cable regularly for damage. Never use the device if the cable is damaged. If the power cable is damaged, have an authorised service center or qualified electrician replace it.
- The device is not adapted for use with an external timer or remote control.
- **Never** leave the device unattended when in use.
- Only use the device indoors.

1.2 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



WARNING!

This symbol highlights hazards which could lead to injury.



WARNING!

This symbol highlights dangerous situations which could lead to injury or death.



HOT SURFACE!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!



CAUTION!

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



NOTE!

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

1.3 Hazard sources



DANGER!

Electric shock hazard!

To avoid the hazard results please follow the safety instructions below.

- Do not use the machine in case of incorrect operation, damages or dropping on the floor.
- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the electric shock hazard will occur.
- Never immerse the plug in water or other liquids.
- Do not use any acid agents and make sure no water ingresses the device.
- Never operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
 - when the device is not used,
 - in case of anomalies during operation,
 - before cleaning.



DANGER!

Suffocation hazard!

- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements.



HOT SURFACE!

Burn hazard!

To avoid the hazard results please follow the safety instructions below.

- During the operation some elements of the device and containers (e.g. dishes) with food may be hot. To avoid burns do not touch hot parts of the device or containers with bare hands. While filling the device or collecting hot dishes use protective gloves or pot holders!



WARNING!

Fire or explosion hazard!

To avoid the hazard results please follow the safety instructions below.

- **Never** use the device near flammable materials, such as alcohol, spirits, or petrol. High temperature may cause their evaporation and due to contact with the ignition sources the deflagration may occur, and in result the injuries and damages.
- In case of fire before the fire extinguishing activities remove the plug from the socket or disconnect the device from the power supply (pull the plug!).
Caution: Do not spray the device with water when it is still connected to the power supply: **Electric shock hazard!**

1.4 Proper use



CAUTION!

The device has been designed and constructed only for commercial use and should be operated by qualified personnel of restaurants, cafeterias, bars and similar facilities.

The operational safety of the device is assured only in case of proper use, according to the operation manual.

All technical activities like installation and maintenance must be performed by the qualified service personnel only.

The hot cabinet is intended only for **heating and maintaining** the temperature of food products placed in appropriate containers.



CAUTION!

Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.

Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.

The operator is liable for all damages resulting from inappropriate use.

2. General information

2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



CAUTION!

Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



NOTE!

If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage


Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- Do not store outdoors.
- Keep it dry and dust-free.
- Do not expose it to aggressive media.
- Do not expose it to direct sunlight.
- Avoid mechanical shocks and vibration.
- In case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly.
If required refresh or renew.


4. Technical data

4.1 Overview of parts

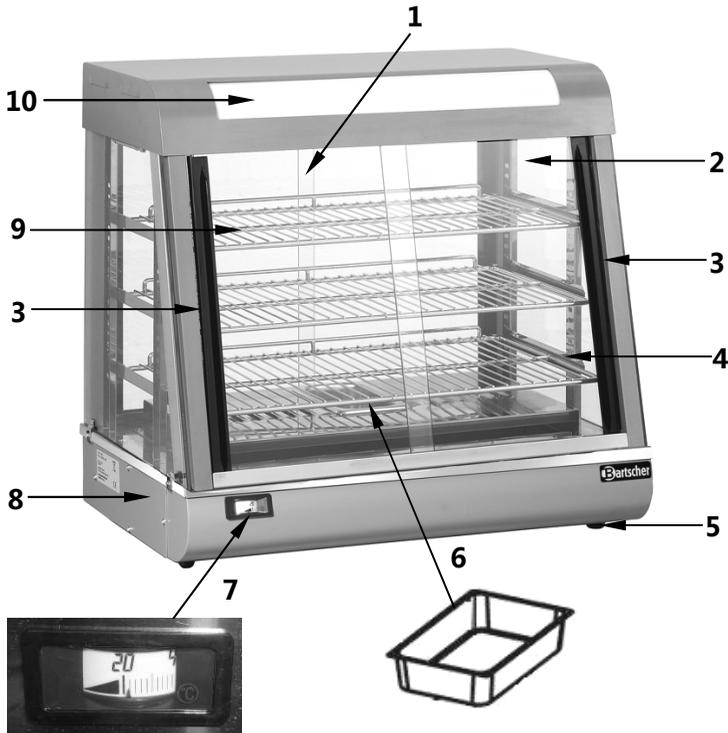

- 1 Rear sliding glass doors
- 2 Front sliding glass doors
- 3 Side lighting
- 4 Shelf guides
- 5 Feet
- 6 Water tray
- 7 Temperature indicator
- 8 Housing
- 9 Shelves
- 10 Upper lighting

Bedienelemente

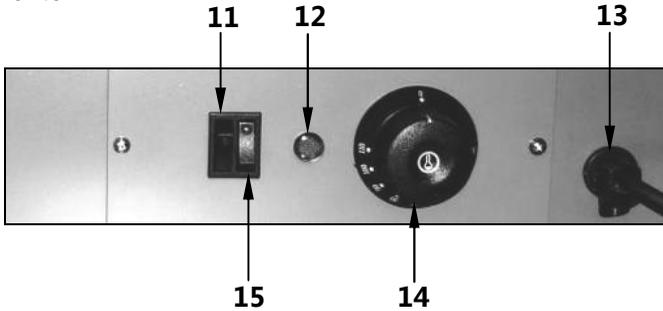

- 11** ON/OFF switch
- 12** Heating control light (orange)
- 13** Power cord
- 14** Temperature dial
- 15** Lighting switch

4.2 Technical specification

Name	Hot cabinet		
Code-No.:	306053	306054	306055
Model:	"Bartscher Deli I"	"Bartscher Deli II"	"Bartscher Deli III"
Construction:	Interior chrome plated, exterior painted		
Capacity:	110 liters	152 liters	373 liters
Temperature range:	30 °C - 90 °C		
Power:	1.84 kW / 230 V	1.84 kW / 230 V	2.2 kW / 230 V
Dimensions (mm)	W 660 D 437 H 655	W 900 D 480 H 590	W 1200 D 480 H 810
Equipment:	3 adjustable shelves		
Shelf dimensions (mm):	W 580 x D 275 W 580 x D 298 W 580 x D 318	W 820 x D 315 W 820 x D 340 W 820 x D 360	W 1120 x D 315 W 1120 x D 340 W 1120 x D 360
Weight:	42.0 kg	52.0 kg	76.0 kg

We reserve the right to make technical changes!

5. Installation and operation

5.1 Installation

Positioning

- Unpack the device and remove all packing material.



CAUTION!

- **Never** remove the rating plate and any warning signs from the device.
- Place the device on top of an even, stable, dry, and water-resistant surface which supports the weight of the device and is not heat sensitive.
- **Never** place the device in humid or wet environment.
- **Never** place the device on the flammable surfaces.
- Do not place the device near walls or other objects made of combustible materials. Keep a minimum distance of 10 cm on all sides.
- Place the device so that the plug is easily accessible and can be quickly removed from its socket in case of necessity.

Connection



DANGER! Electric shock hazard!

The device can cause injuries due to improper installation!

Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!

Connect the device only to properly installed single socket with protective terminal.

- The electrical circuit in the socket must be secured to at least 16A. Only connect the device directly to the wall socket; do not use any extension cords or power strips.

5.2 Operation

Preparing the device

- Prior to using the device, clean it thoroughly in accordance with the instructions in 6 "Cleaning".
- Place the shelves in the guides at the desired height.
- Insert the plug into a single grounded outlet.
- Turn the device on using the **ON/OFF** switch on the control panel.

Heating and maintaining temperature of food products



NOTE!

Preheat the cabinet to the desired temperature without water in the water tray and without food. Preheating also heats the glass panes and glass doors, which prevents condensation from forming on glass panes and doors after food is placed inside.

- Use the temperature dial to set the temperature between 30 °C and 90 °C.
- The orange heating control light next to the temperature dial will come on. When the desired temperature has been reached, the heating device will go off and the orange light will go out. If the temperature in the device begins to fall, the heater will come back on and the light will come on as well.
- The cabinet's internal temperature can be checked by reading the temperature indicator at the front of the device. Ensure the set operating temperature has been reached before inserting food products into the device.
- Prepare the food products in the meantime.
- Pour water into the tray (approx. 0.6 liters) and replace the tray inside the device. The water tray is designed to generate humidity inside the cabinet to prevent food from drying out (especially important for baked goods).



NOTE!

Monitor the level of water in the tray and add water as necessary.

- Place food in appropriate containers on the shelves in the cabinet.



CAUTION!

Never place food directly on the shelves, always use appropriate containers or dishes for heating food!!

- For easier use, the device has been equipped with sliding front and rear glass doors allowing food to be placed inside at the rear and removed at the front. After inserting or removing food from the cabinet, close the glass doors to keep heat from escaping the cabinet.
- Food will remain warm at the set temperature.



WARNING! HOT SURFACE!

When in use, some parts of the device get very hot.

To avoid burns, wear protective gloves when touching hot surfaces!

- The device is equipped with **lighting** at the left and right sides of the front sliding doors frame. You can turn the lighting on with the switch on the control panel.
- When the device is no longer to be used, turn it off via the **ON/OFF** switch and remove the plug from its socket.

6. Cleaning



CAUTION!

Disconnect the unit from the power supply (unplug!) before cleaning.

The unit is not designed to be rinsed with running water.

Do not use a pressure washer to clean the device!

Be careful and do not let the water into the unit.

- Regularly wash the device at the end of the day or if it will remain unused for a longer period of time.
- Prior to washing, remove the plug from its socket and leave the device to cool.
Remove the shelves and water tray from the cabinet. Wash these elements in warm water with a gentle cleaning agent. **Ensure no water gets in the place where the water tray is situated.**
- Rinse in running water and dry thoroughly.
- If the water tray has calcium deposits, remove them regularly using commercially available chemicals.
- Wash the inside and outside of the device, the sliding doors and control panel with a soft, moist cloth and gentle cleaning agent.

- Use only soft cloths, never use any abrasive scrapers as they may damage the surface of the device.
- After washing, dry and polish the device's surface with a soft, dry cloth.

Storage

- If the device is not used for any lengthy period, clean it according to the aforementioned description and store it in dry, clean place protected against cold, sun and children. Do not place any have objects on the device.

7. Waste disposal

Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



WARNING!

To exclude any abuse and the dangers involved make the waste device unfit for use before disposal. For that purpose disconnect device from mains supply and remove mains connection cable from the device.



CAUTION!



For the disposal of the device please consider and act according to the national and local rules and regulations.