

Elegance 1/1 GN



500834

ENGLISH
Translation
of the original instruction manual



Read these instructions before using and keep them available at all times!

1. General information	14
1.1 Information about the instruction manual	14
1.2 Key to symbols	14
1.3 Liability and Warrantees	15
1.4 Copyright protection	15
1.5 Declaration of conformity	15
2. Safety	16
2.1 General information	16
2.2 Safety instructions for use of the device	16
2.3 Intended use	17
3. Transport, packaging and storage.....	18
3.1 Delivery check.....	18
3.2 Packaging	18
3.3 Storage.....	18
4. Technical data	19
4.1 Overview of parts	19
4.2 Technical specification	20
5. Installation and operation.....	20
5.1 Safety instructions	20
5.2 Installation and connection.....	21
5.3 Operation	21
6. Cleaning and maintenance	23
6.1 Safety advice.....	23
6.2 Cleaning	23
6.3 Safety instructions for maintenance	24
7. Waste disposal	24

Bartscher GmbH
 Franz-Kleine-Str. 28
 D-33154 Salzkotten
 Germany

phone: +49 (0) 5258 971-0
 fax: +49 (0) 5258 971-120

1. General information

1.1 Information about the instruction manual

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

1.2 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



WARNING!

This symbol highlights hazards, which could lead to injury.

Please follow the instructions very carefully and proceed with particular attention in these cases.



WARNING! Electrical hazard!

This symbol draws attention to potential electrical hazards. If you do not follow the safety instructions, you may risk injury or death.



CAUTION!

This symbol highlights instructions, which should be followed to avoid any risk of damage, malfunctioning and/or breakdown of the device.



NOTE!

This symbol highlights tips and information, which have to be followed for an efficient and trouble-free operation of the device.



WARNING! Hot surface!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!

1.3 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



NOTE!

Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

1.4 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

1.5 Declaration of conformity

The device complies with the current standards and directives of the EU.

We certify this in the EC declaration of conformity.

If required we will be glad to send you the according declaration of conformity.

2. Safety

This section provides an overview of all important safety aspects.

In addition every chapter provides precise safety advice for the prevention of dangers which are highlighted by the use of the above mentioned symbols.

Furthermore, attention should be paid to all pictograms, markers and labels on the device, which must be kept in a permanent state of legibility.

By following all the important safety advice you gain an optimal protection against all hazards as well as the assurance of a safe and trouble-free operation.

2.1 General information

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

Knowing the contents of the instruction manual as well as avoiding mistakes and thus operating this device safely and in a fault-free manner is very essential to protect yourselves from the hazards.

To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.

This device may only be operated in technically proper and safe condition.

2.2 Safety instructions for use of the device

The specifications regarding the industrial safety are based on the Regulations of the European Union applicable at the time of manufacturing the device.

If the device is used commercially, the user is obliged to ensure that the said industrial safety measures concur with the state of the rules and regulations applicable at the time in question for the entire period of use of the device and to comply with the new specifications.

Outside the European Union, the industrial safety laws applicable at the place of installation of the device and the regional territorial provisions must be complied with.

Besides the industrial safety instructions in the instruction manual, the general safety and accident prevention regulations as well as environment protection regulations applicable for area of application of the device must be followed and complied with.



CAUTION!

- The device can be used by children **8 years and up**, as well as by people with disabilities and those with limited experience/knowledge as long as they are under supervision or have been instructed on proper use of the device and its possible dangers.

- **Children** should not play with the device.
- Cleaning and **maintenance cannot be performed by children** younger than 8 years old and must be done under supervision.
- **Children under the age of 8 years old** must be kept away from the device and its power cord.
- Please keep these instructions and give them to future owners of the device.
- All people using the device should follow the instructions and tips contained in these instructions.
- Only use the device indoors.

2.3 Intended use

Safe operation is only guaranteed when using the device for its intended purpose.

Any technical interventions, as well as assembly and maintenance are to be made by a qualified customer service only.

The device is intended for home use or in similar places such as:

- in kitchens for store or office employees or in other service locations;
- in suburban properties;
- by guests of hotels, motels and other places of accommodation;
- in Bed & Breakfasts.

The Chafing Dish is intended only for **maintaining the temperature of warm food products**.

Do not use the **Chafing Dish** for:

- preparing food products;



CAUTION!

Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.

Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.

The operator is liable for all damages resulting from inappropriate use.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



NOTE!

If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage

Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- Do not store outdoors.
- Keep it dry and dust-free.
- Do not expose it to aggressive media.
- Do not expose it to direct sunlight.
- Avoid mechanical shocks and vibration.
- In case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly.
If required refresh or renew.

4. Technical data

4.1 Overview of parts



- ① Handle
- ② Lid
- ③ Viewport
- ④ Lid hinges
- ⑤ Food container
- ⑥ Frame
- ⑦ Water basin
- ⑧ Power cors
- ⑨ **ON/OFF switch**

4.2 Technical specification

Name	Electric Chafing Dish Elegance 1/1 GN
Code-No.:	500834
Construction:	Frame and lid: nickel-chrome steel Water basin: black plastic
Temperature range:	20 °C to 85 °C
Power:	0.76-0.9 kW / 230 V~ 50 Hz
Dimensions:	W 670 x D 420 x H 370 mm
Weight:	9.6 kg

We reserve the right to make technical changes!

5. Installation and operation

5.1 Safety instructions



WARNING! Risk of electric shock!

The device must only be connected to a properly installed single socket with protective contact.

Never remove the power cable by pulling the cable itself; always grab the plug housing.

- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled.
- Never place the device or other objects on the power cable.
- Do not lay the cable over carpets or heat insulations. Do not cover the cable. Keep away the cable from operating range and do not dunk it into water.
- Do not use the device in case it does not function properly, has been damaged or dropped.
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- Do not move or tilt the device when in operation.
- **Never** leave the device unattended when in use.

5.2 Installation and connection

- Unpack the device and remove all packing material.
- Locate the device in a place that can support its weight and is heat-resistant.
- **Never** place the device on a flammable surface.
- **Never** place the device in moist or wet surroundings.
- Do not place the device near an open flame, electric oven, heater or other source of heat.



WARNING! Hazard via electrical current!

The device can cause injuries due to improper installation!

Before installation the local power grid specification should be compared with that of the device (see type label).

Connect the device only in case of compliance!

Take note of the security advice!

- The electrical circuit of the socket must be secured to at least 16A. Only connect the device to a wall outlet; do not use any extension cords or power strips.
- Place the device so that the plug is easily accessible so as to quickly disconnect the device if the need arises.

5.3 Operation

- Before using the device, clean it thoroughly in accordance with the instructions contained in **6.2 "Cleaning"**.
- Place the frame on a level, stable surface.
- Place the water basin inside the frame and mount it with a screw to the hinge.
- Leave the lid open and fill the water basin to the marking on the side of the basin (see illustration right). **Note:** Pour warm water, as this will save time and energy.




CAUTION!

Never turn the device on without water!

Ensure the water level does not exceed the marking.

Do not overfill the basin as the food container must not float.

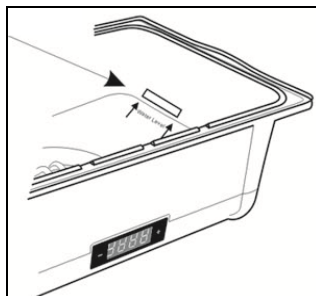

- Put **warm** dishes into appropriate containers (1/1 GN, 100 mm depth) and place the container(s) into the water basin.



WARNING! Danger of burns!

Ensure that no liquids or dishes bubble when heated! Avoid burns by not overfilling the basin!!

- Close the lid.
- Connect the device to an appropriate socket.

Temperature regulation



- Turn the device on using the **ON/OFF** switch. The digital display will show the set temperature value. Recommended heating temperature is between 75 °C and 85 °C, serving temperature is between 65 °C and 75 °C.
- The device's temperature is controlled using a digital temperature regulator located at the front of the device. Use the buttons "+" and "-" to set the desired temperature within a range of 20 °C to 85 °C
- If the temperature falls to 3 °C below the set value, the water in the basin will begin to heat up; when the temperature reaches 1 °C above the set value, the water will stop heating.
- The temperature can be adjusted using the buttons "+" and "-" while the device is in operation.
- Heating of the water maintains the temperature of food placed in containers.

- To remove warm food, first open the lid by using the handle. **Danger of burns!** Hot steam can escape when food is removed; exercise caution when opening the lid.
- Serve warm food and close the lid to avoid loss of heat.
- If the device is to remain unused, disconnect it via the **ON/OFF** switch and remove the plug from its socket.
- Leave the device to cool, then remove the water from the basin.

6. Cleaning and maintenance

6.1 Safety advice

- Before beginning with repair or cleaning works make sure the device has been disconnected from power supply and has cooled down.
- Do not use any acid agents and make sure no water ingresses the device.
- To protect yourself from electric shock, **never** immerse the device, its cables and the plug in water or other liquids.



CAUTION!

The device is not suited for direct washing via water jets.

Therefore, you must not use any kind of pressure water jet for cleaning the device!

6.2 Cleaning

- Regularly clean the device.
- Remove the water basin from the frame. Empty it and wash with warm water and a soft, cloth, then dry. Ensure that no electric elements come into contact with water during washing.
- Wash the frame and cover with warm water and a mild cleaning agent, then rinse with clean water and dry with a soft cloth. The lid may be disconnected from the frame by removing the screws.
- Wash the food container under running water, using a sponge or soft cloth and mild cleaning agent; rinse with clean water.
- Always use soft cloths, **never** use harsh cleaners that could scratch the device.
- Dry and polish the device after cleaning with a dry cloth.
- If the device is used frequently, regularly remove limescale from the bottom of the water basin with a vinegar and water solution or special descaling product. **Follow manufacturer's instructions!**

6.3 Safety instructions for maintenance

- Inspect the power cable regularly for damage. Never use the device if the cable is damaged. If the power cable is damaged, have an authorised service center or qualified electrician replace it.
- In case of damage or malfunction, please contact your stockist or our customer service centre.
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**

7. Waste disposal

Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



WARNING!

To exclude any abuse and the dangers involved make the waste device unfit for use before disposal. For that purpose disconnect device from mains supply and remove mains connection cable from the device.



NOTE!



For the disposal of the device please consider and act according to the national and local rules and regulations.

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120