

„Panini-T“



A150774

A150776

A150779

ENGLISH

Table of contents

1. Safety 20
1.1 Key to symbols 20
1.2 Safety instructions 21
1.3 Proper use 25

2. General information 26
2.1 Liability and Warrantees 26
2.2 Copyright protection 26
2.3 Declaration of conformity 26

3. Transport, packaging and storage..... 27
3.1 Delivery check 27
3.2 Packaging..... 27
3.3 Storage..... 27

4. Technical data 28
4.1 Technical data 28
4.2 Overview of parts 29

5. Installation and operation..... 30
5.1 Installation 30
5.2 Operation..... 31

6. Cleaning and maintenance 34

7. Possible Malfunctions 35

8. Waste disposal 36

Bartscher GmbH
Franz-Kleine-Str. 28
33154 Salzkotten
Germany

phone: +49 5258 971-0
fax: +49 5258 971-120
Service-Hotline: +49 5258 971-197
www.bartscher.com



Read this instruction manual before using and keep them available at all times!

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

1.1 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



DANGER!

This symbol highlights hazards which could lead to injury.



WARNING!

This symbol highlights dangerous situations which could lead to injury or death.



HOT SURFACE!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!



CAUTION!

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



NOTE!

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

1.2 Safety instructions

- The device is not intended for use by individuals (including children) with physical or mental disabilities, insufficient experience, and/or insufficient knowledge unless such persons are under the care of a person responsible for their safety or have received instructions regarding appropriate use of the device.
- Children should be observed to ensure that they are not playing with or starting the device.
- **Never** leave the device unattended when in use.
- Only use the device indoors.
- The device is not adapted for use with an external timer or remote control.
- The device must be operated in correct and safe technical condition only. In case of operational problems disconnect the device from the power supply (pull the plug from the socket) and contact the service company.

- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements. **Suffocation hazard!**
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.



DANGER! Electric shock hazard!

To avoid the hazard results please follow the safety instructions below.

- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled. Never place the device or other objects on the power cable.
- Do not cover the cable. Keep away the cable from operating range and do not immerse it into water.

- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.
- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the **electric shock hazard** will occur.
- Do not use any acid agents and make sure no water ingresses the device.
- **Never** operate the device with moist hands or standing on wet floor.
- Disconnect the device from the electric power supply.
 - when the device is not used,
 - in case of anomalies during operation,
 - before cleaning.



HOT SURFACE! Burn hazard!

Follow the safety instructions listed in order to avoid the hazard:

- During the operation, the device's body and grill plates become very hot. Do not touch these surfaces. Always use the service handle to open the device. Use appropriate kitchen utensils to place and remove food from the contact grill.

- The device remains hot still for some time after it has been switched off. Before cleaning or moving the device to another place, let it cool down completely.
- **Never** move the device during operation.



WARNING! Fire or explosion hazard!

Follow the safety instructions listed in order to avoid the hazard:

- In order to avoid risk of fire and damage to the device, **never** place kitchen utensils, towels, paper and the like on the grill plate during operation.
- **Never** operate the device near combustible, easily flammable materials (e.g. petrol, spirit, alcohol etc.). They evaporate through heating and in case of contact with ignition sources deflagrations can occur which can lead to serious personal injuries and property damages.
- In case of fire and before taking relevant fire extinguishing action, disconnect the device from the electric power supply (unplug!).

Caution: Never use water for fire extinguishing when the device is connected to the power supply. Electric shock hazard!

When the fire has been extinguished ensure sufficient fresh air inflow.

1.3 Use as intended



CAUTION!

The device has been designed and built for commercial use and should be operated only by qualified personnel in kitchen facilities.

Every use of the device for a different purpose and/or in a way that diverges from the intended use is not allowed and is assumed as the use against the intended purpose.

Any claims against the manufacturer or their authorized representatives as a consequence of experiencing damage resulting from the use against the intended purpose are inadmissible.

The liability for damage occurred during the use of the device against its intended purpose is borne solely and exclusively by the user.

Safety operation of the device is guaranteed only when it is used for its intended purpose and according to the instructions included in this manual.

The contact grill is intended only for grilling dishes.

1.4 Use against the intended purpose

Any use other than those mentioned in point “**1.3 Use as intended**“ is assumed as the use against the intended purpose and is not allowed.

The use against the intended purpose may lead to severe injury or damage caused by hazardous voltage, fire or high temperature. It is allowed to use the device to perform only the work described in the instruction manual. Improper use may cause the device damage.

Any manipulation with the device, assembly or maintenance work may be performed exclusively by the authorized service staff.

2. General information

2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



CAUTION!

Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage

Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- do not store outdoors,
- keep it dry and dust-free,
- do not expose it to aggressive media,
- do not expose it to direct sunlight,
- avoid mechanical shocks and vibration,
- in case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly, if required refresh or renew.


4. Technical data

4.1 Technical data

Description	Contact Grill „Panini-T“		
Code- No.:	A150774	A150776	A150779
Model:	1R	1GR	1G
Grill surface versions:	Grooved	Upper grill plate - grooved, lower grill plate - flat	Flat
Material:	Body: stainless steel, Grill plates: cast iron, enamelled		
Model:	<ul style="list-style-type: none"> ▪ Number of grill units: 1 ▪ Temperature control: via a thermostat ▪ Degree of protection: IPX3 ▪ Timer ▪ Audible signal when the time expires (0 - 15 minutes) ▪ Control: manual, toggle ▪ ON/OFF switch ▪ Indicator lights: ON/OFF, heating ▪ Grease collection tank 		
Temperature range:	50 °C to 300 °C		
Power supply:	2.2 kW / 230 V 50/60 Hz		
Dimensions:	W 410 x D 400 x H 200 mm		
Dimensions of upper grill plate	W 340 x D 220 mm		
Dimensions of lower grill plate:	W 360 x D 285 mm		
Weight:	18.4 kg	18.6 kg	18.0 kg
Accessories:	Cleaning brush		

We reserve the right to make technical changes!

4.2 Overview of parts

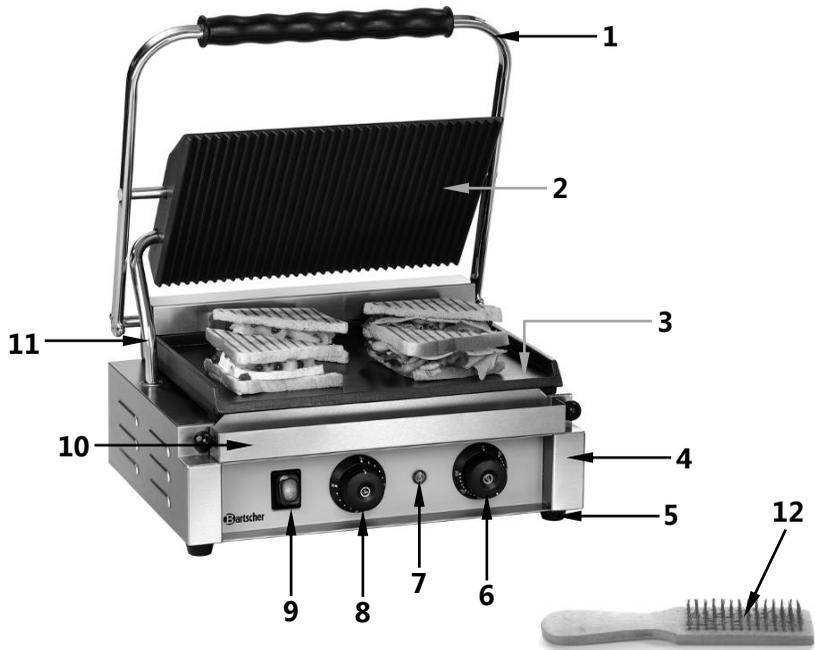

- 1** Service handle
- 2** Upper grill plate
- 3** Lower grill plate
- 4** Body
- 5** Rubber feet
- 6** Temperature control knob
- 7** Heating control light (orange)
- 8** Timer knob
- 9** ON/OFF switch with integrated power indicator light (green)
- 10** Grease collection tray
- 11** Cable guide
- 12** Cleaning brush

5. Installation and operation

5.1 Installation



CAUTION!

Any installation, connection and maintenance work related to the device must be performed by the qualified and certified technician in accordance with the applicable international, national and local regulations.

Positioning

- Unpack the device and discard the entire packaging material according to the regulations valid in the country of installation.
- Place the device in a well ventilated room or under the ventilating hood to efficiently remove vapours produced when cooking dishes.
- Place the device on an even, stable, dry and waterproof and heat-resistant surface.
- **Never** place the device on an inflammable surface.
- **Never** place the device in wet or damp locations.
- Place the device so that it is easily accessible, leaving enough space to freely service the device and ensure appropriate air circulation.
- **Never** place the device directly against walls, low walls, furniture or other objects which are made of flammable material. Keep a distance of at least 10 cm at the sides and at the rear from walls and other objects. Take into account the applicable fire protection regulations.
- If keeping the above mentioned distance is impossible, apply appropriate safety measures (e.g. heat-resistant foil), which will ensure keeping the wall's temperature within the safe range.
- Before the first use, remove the protective foil from the device. Remove the foil slowly not to leave glue residues. Remove possible glue residues with appropriate solvent.



CAUTION!

Never remove the type plate and warning signs from the device.

Connection



DANGER! Electric shock hazard!

The device can cause injuries due to improper installation! Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!

- The power supply circuit with the socket must be protected by the fuse of at least 16A. Connect the device directly to a single grounded socket. Do not use any power bar or multiple socket.
- Place the unit so that the plug is easily accessible and can be quickly removed from its socket in case of necessity.

5.2 Operation

Starting / Settings



WARNING! Health hazard due to smoke!

Due to the food residues, there may appear some smoke when grilling.

During the first use, do not place any food products in the device and make sure that the place of installation is well ventilated.

- Before the first use, clean the device thoroughly according to the instructions included in **section 6 „Cleaning and maintenance“**. Dry the device thoroughly.
- Install the grease collection tray in the device and make sure that the device is used only with the mounted grease connection tray to avoid damaging the device or soiling.
- Close the device using the service handle.
- Connect the device to the single grounded socket.
- Set the ON/OFF switch to „I“ position to switch the device on. The device is ready to work, the green control light embedded in the ON/OFF switch comes on.

- The device is equipped with the temperature control knob. The temperature is adjustable between 50 °C and 300 °C. We recommend maintaining the maximum operating temperature between 200 °C and 250 °C.
- Using the timer knob you can set the time within the range from 0 to 15 minutes. Signal tone is heard after expiry of the set time. Heating power does not switch off automatically.

Grilling



HOT EXTERNAL SURFACE! Risk of burns!

Body and grill plates become very hot during the operation.

Never touch the device during operation or shortly after.

- Turn the temperature control knob to the desired temperature. The orange heating control light comes on, the device is heating up. After switching the device on, the heating time is approx. 8 minutes until reaching the temperature of 250 °C.
- If necessary, set the grilling time using the timer knob.
- The orange heating control light goes off after the set temperature has been reached. When the temperature drops by ca. 10 °C, the heating is automatically turned on again and the orange control light comes on again.
- Open the device using the service handle and lift the upper grill plate.
- Depending on the food product to be grilled, pour a bit of cooking oil on the surface of grill plates to avoid burning food.
- Place the product to be grilled.
- Close the device using the service handle. There is no need to turn the grilled product.
- Watch the product during grilling until the grilling process is finished.
- After grilling, turn the temperature control knob to „0“ position.



WARNING! Danger of scalding by hot steam!

When opening the device, a hot steam may escape.

Open the device slowly and carefully.

- Open the device using the service handle.



NOTE!

Do not use any hard or sharp objects on the grill to prevent damaging the surface or control elements.

- Remove the grilled food from the grill plate.
- If the device is no longer used, turn the ON/OFF switch to **O** position and switch the power supply off (pull the plug from the mains socket!).

Grease collection tray

- Regularly empty the grease collection tray, after the device, grease collection tray and its contents cooled off.



WARNING! Risk of burns!

Protect your hands and face against possible grease splashes!

Safety thermostat



NOTE!

The device is equipped with safety thermostat which is triggered in case of overheating of the device and automatically switches the device off.

If the safety thermostat is triggered, disconnect the device from the power supply (pull the plug from the socket!) and leave it to cool off.

Press **RESET** button located at the bottom of the device.

In case of frequent triggering of the safety thermostat within short intervals, please contact the service.

Setting of the service handle / upper grill plate

If the service handle does not remain still in a lifted position or comes down, you need to tighten the screws in a brass block at the rear of the device using the supplied Allen wrench.



6. Cleaning and maintenance



WARNING

Before cleaning the device, turn the device off with ON/OFF switch and disconnect it from the power supply (pull the plug!).

Leave the device to cool down.

The device is not suited for direct washing via water jets!

Protect the device from the water penetration.

- Clean the device after each use.
- Use only a soft cloth or sponge. **Never** use any abrasive cleaning agents as they may scratch the surface.
- **Never use** any aggressive agents or sprays.
- Clean the body, service handle, external part of the upper grill plate with a soft, moist cloth. In case of more stubborn dirt, use a mild cleaning agent.
- Remove stubborn dirt from the grill plates using the supplied cleaning brush.
- Finally, clean the grill plates on the inside (upper and lower plate) with a soft, moist cloth and a mild cleaning agent.
- If the device is really dirty, lubricate the still warm grill plates with oil on the inside, wait a few minutes and then clean the grill plates with soft, moist cloth.
- Clean the grease collection tray under warm running water with mild cleaning agent and soft cloth or sponge.
- After cleaning, use a soft, dry cloth to wipe dry and polish the surface.

Storage

- If the device is not used for any lengthy period, clean it according to the aforementioned description and store it in dry, clean place protected against cold, sun and children. Do not place any heavy objects on the device.

7. Possible Malfunctions

In case of failure turn the device off with the main switch and disconnect the device from the power supply (pull the plug!). Before calling the technician or informing the vendor check the possibility of removing the failure by yourself according to the table below.

Problem	Possible reason	Solution
The grill plates do not get warm although the device has been turned on and the orange temperature indicator light is on.	The temperature controller knob is damaged.	Contact the vendor.
	At least one heating wire is damaged.	Contact the vendor.
	Safety thermostat was triggered.	Wait until the device cools off and press RESET button located at the bottom of the device.
The device is switched on. The orange indicator light is on but the temperature cannot be set.	The temperature controller is damaged.	Contact the vendor.
The orange heating up indicator light is not on although the device is turned on and the grilling process runs as normal.	The indicator light is damaged.	Contact the vendor.
The green indicator light in the ON/OFF switch is not on although the device is turned on.	Incorrect or missing power supply.	Check the power supply and the cable for damage or faults.
	The fuse is activated.	Contact the vendor.

When the anomalies cannot be removed:

- do not open the body,
- notify the customer service point or contact the sales agent, while providing the following information:
 - type of malfunction;
 - article and serial number (rating plate at the rear of the device);
 - date of purchase.

8. Waste disposal

Old devices



The electric devices are marked with this symbol. You must not dispose of electric devices with household waste. When the device may not be longer used each consumer is obliged to dispose of the device at the dedicated local collection point, separately from household waste.



NOTE!

Electric devices should be used and disposed of properly to prevent the impact on the environment.

- Disconnect the device from the power supply and remove the power cord from the device.