



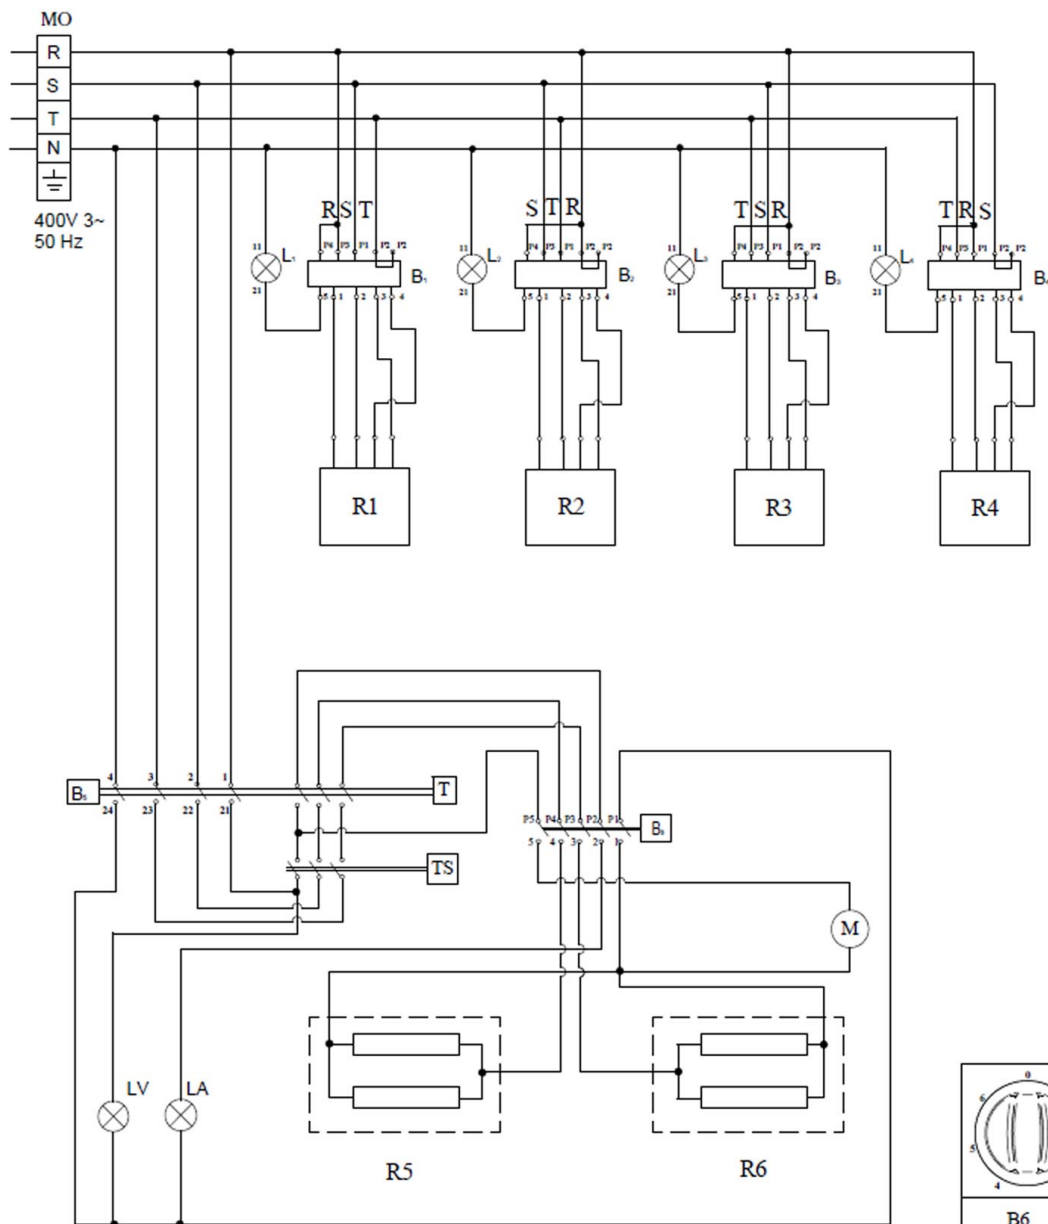

LEGENDA	LEGEND	LEGENDE	LEGENDE
B _i	INTERRUTTORE	INTERRUPTEUR	SWITCH
B _{1,2,3,4}	SELETTORE	SELECTEUR	SELECTOR
B _i	WAHLSCHALTER	SELECTEUR	SELECTOR
L _{1,2,3,4}	SPIA MACCHINA IN TENSIONE	MACHINE LIVE WARNING LAMP	MACHINE LIVE WARNING LAMP
LA	SPIA MACCHINA IN FUNZIONE	MACHINE UNDER SPANNUNG-LAMPE	MACHINE ON WARNING LAMP
LV	SPIA MACCHINA IN TENSIONE	MACHINE UNDER SPANNUNG-LAMPE	MACHINE LIVE WARNING LAMP
M	MOTORE	MOTEUR	MOTOR
M0	MORSETTIERA	BOITE DE CONNECTION	MAIN TERMINAL BOARD
R _{1,2,3,4}	RESISTENZE	HEIZUNGEN	HEATERS
R _{5,6}	RESISTENZE	HEIZUNGEN	HEATERS
T	TERMOSTATO	THERMOSTAT	THERMOSTAT
TS	TERMOSTATO SICUREZZA	SICHERHEITSTHERMOSTAT	SAFETY THERMOSTAT

B1,B2,B3,B4							
posizione	0	6	5	4	3	2	1
POTENZA	0 kW	2.6 kW	1.75 kW	1.3 kW	0.45 kW	0.34 kW	0.24 kW

	POS. 0	POS. 1	POS. 2	POS. 3	POS. 4	POS. 5	POS. 6
B6	OFF	R1+R2+M	R1+R2	R2+M	R2	R1+M	R1.

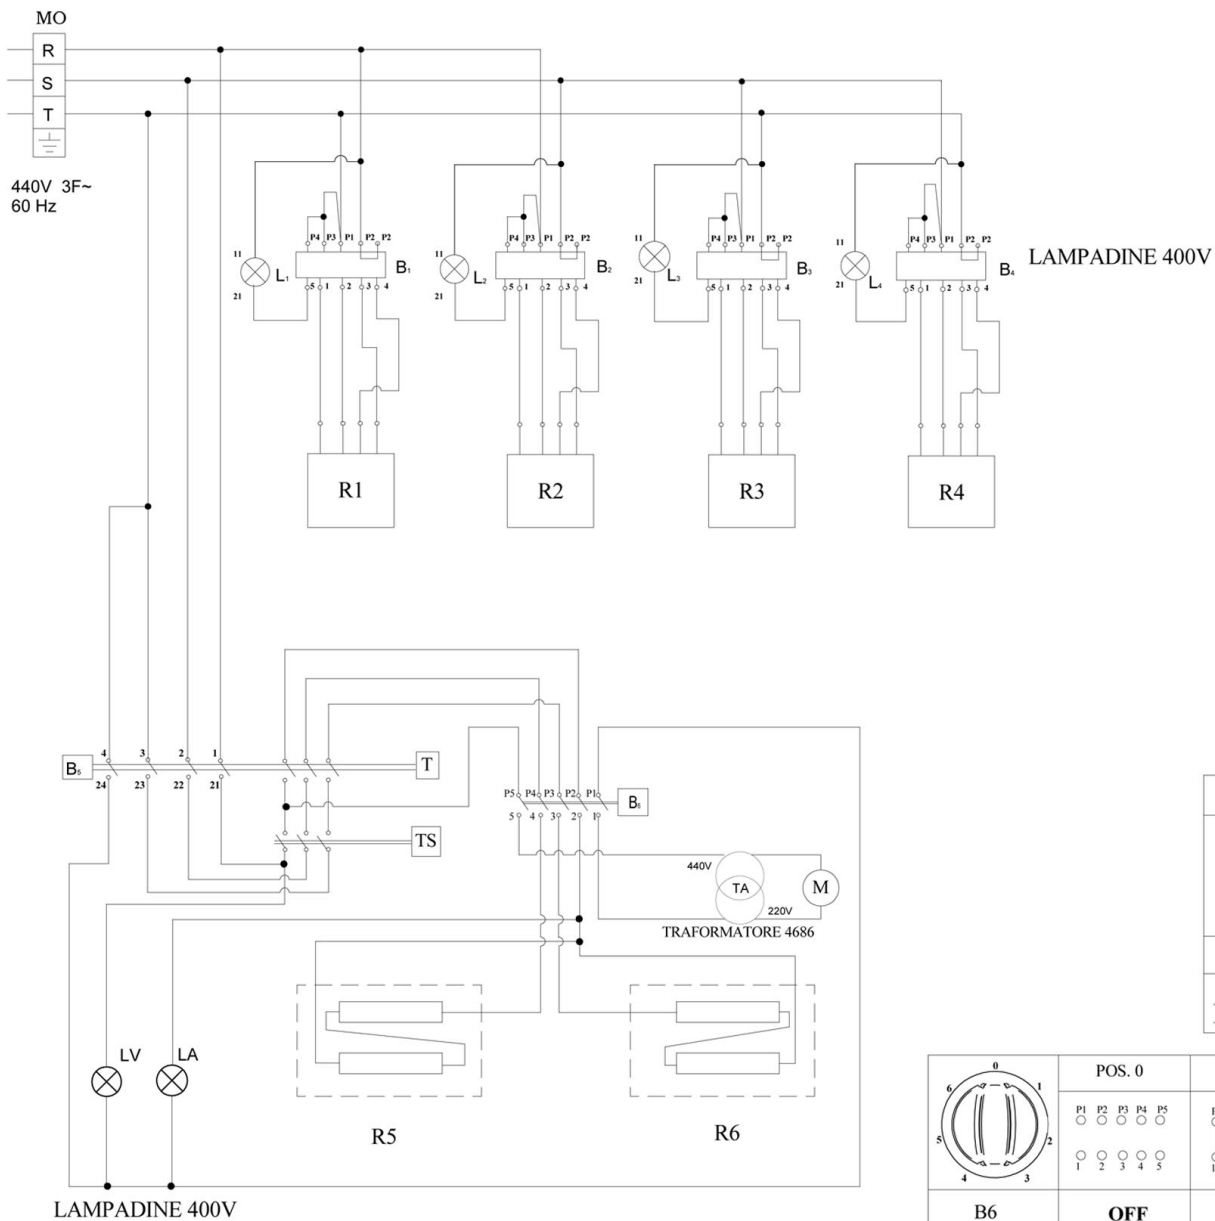

LEGENDA	LEGEND	LEGENDE	LEGENDE
B _i	INTERRUTTORE SCHALTER	INTERRUPTEUR SWITCH	
B _{1,2,3,4}	SELETTORE WAHLSCHALTER	SELECTEUR SELECTEUR	
B ₅	SELETTORE WAHLSCHALTER	SELECTEUR SELECTEUR	
L _{1,2,3,4}	SPIA MACCHINA IN TENSIONE MACHINE LIVE WARNING LAMP	MASCHINE UNTER SPANNUNG-LAMPE LAMPE APPAREIL SOUS TENSION	
LA	SPIA MACCHINA IN FUNZIONE MACHINE IN BETRIEB-LAMPE	LAMPE MACHINE EN FONCTION MACHINE ON WARNING LAMP	
LV	SPIA MACCHINA IN TENSIONE MACHINE UNTER SPANNUNG-LAMPE	LAMPE APPAREIL SOUS TENSION MACHINE LIVE WARNING LAMP	
M	MOTORE MOTOR	MOTEUR MOTOR	
M0	MORSETTIERA KLEMMENBRETT	BOITE DE CONNECTION MAIN TERMINAL BOARD	
R _{1,2,3,4}	RESISTENZE HEIZUNGEN	RESISTANCES HEATERS	
R _{5,6}	RESISTENZE HEATERS	HEIZUNGEN RESISTANCES	
T	TERMOSTATO THERMOSTAT	THERMOSTAT THERMOSTAT	
TA	TRASFORMATORE TRANSFORMATOR	TRANSFORMATEUR TRANSFORMATOR	
TS	TERMOSTATO SICUREZZA SICHERHEITSTHERMOSTAT	THERMOSTAT DE SECURITE SAFETY THERMOSTAT	

B1,B2,B3,B4							
posizione	0	6	5	4	3	2	1
POTENZA	0 kW	2.6 kW	1.75 kW	1.3 kW	0.45 kW	0.34 kW	0.24 kW

	POS. 0	POS. 1	POS. 2	POS. 3	POS. 4	POS. 5	POS. 6
B6	OFF	R1+R2+M	R1+R2	R2+M	R2	R1+M	R1.