

W3000



825222

Technical data

Name	Heater holder W3000
Code-no.:	825222
Material:	Steel, painted
Model:	<ul style="list-style-type: none"> ▪ Only suitable for horizontal mounting ▪ Easy dismantling and assembly ▪ Designed: <ul style="list-style-type: none"> - For attachment to a square tube, size: 20 x 20 mm to 40 x 40 mm - For attachment to a round tube, size: Ø 20 mm to 40 mm
Dimensions:	W 180 x D 85 x H 70 mm
Weight:	0.55 kg

Properties

This holder facilitates the installation and dismantling of the infrared heater W3000 E, code-no.: 825214 to the square tube or round tube. This guarantees flexible use as required.

Equipment included


Unpack the holder and dispose of all packaging material. Check the delivery for completeness according to the following table.

No.	Description	Number
1	M6x12 bolt	4
2	U profile	1
3	M6 nuts	4
4	Anti-slip mat	1
5	M6x50 bolt	2
6	M8x25 locking bolt	1
	Allen key	1

Important tips


- Do not mount the heater holder in the vicinity of flammable, explosive materials.

- Do not mount the holder directly to a wall or ceiling but on a suitable square or round tube which is away from the wall or ceiling at a distance of at least **10 cm**.
- Make sure the distance of the heaters from the people below is **at least 50 cm**.

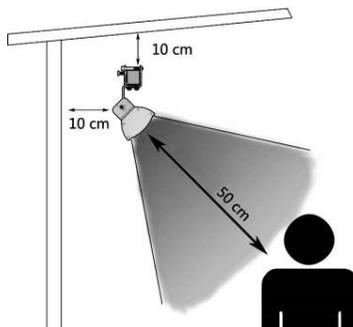

- During installation of the heater to the holder pay attention to the path of the heater cable.
- Connect the heater to the power supply only when the installation to the holder is completed.
- Never touch the holder and heater during operation. Hazard of burns exists!


- Never cover the holder and heater during operation.

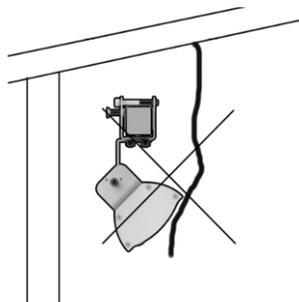

Installation


Step 1

Mount the holder U profile (2) onto device 825214 using the supplied bolts M6x12 (1) and nuts M6 (3).

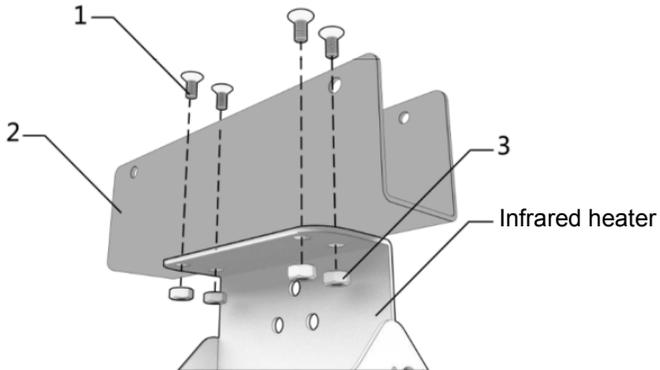


Step 2

Next, mount the heater (2) on a suitable square or round tube with the supplied bolts M6x50 (5). Tighten the bolts with use of an Allen key.

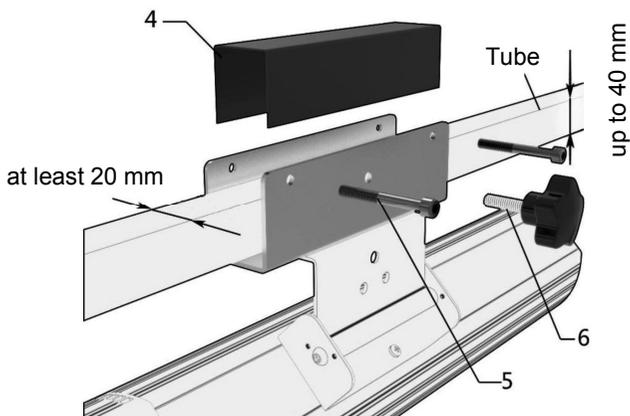

Step 3

Tighten the holder on the tube with the locking bolt M8x25 (6)

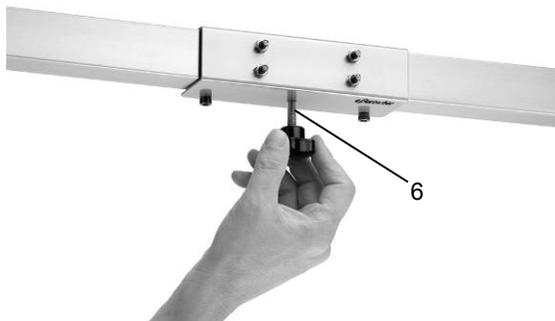

Dismantling

The holder and heater may be easily dismantled if necessary.

To do so, first undo the locking bolt M8x25 (6) and unscrew the bolt M6x50 (5).

Remove the holder with the heater.

To dismantle the heater from the holder, unscrew the bolts M6x12 (1) and nuts M6 (3).

When not used for a longer time, store the heater and holder in a dry and clean place, away from frost and sunlight, out of reach of children.