



300092

PRODUCT DESCRIPTION


Name:	<ul style="list-style-type: none">• Transport cart for GN containers, GN trays and platters suitable for GN containers 1/1, 1/2, 1/3, and 2/3
Article number:	<ul style="list-style-type: none">• 300092
Material:	<ul style="list-style-type: none">• stainless steel
Construction:	<ul style="list-style-type: none">• for transporting max. 7 GN containers, depth 65 mm• 4 rubber rotating wheels, Ø 100 mm• 2 rotating wheels with brake• 1 working surface: W 380 x D 550 mm
Frame:	<ul style="list-style-type: none">• hollow square rods 25 x 25 mm
Dimensions:	<ul style="list-style-type: none">• W 450 x D 620 x H 905 mm
Load capacity:	<ul style="list-style-type: none">• 50 kg
Space between shelves:	<ul style="list-style-type: none">• 80 mm
Weight:	<ul style="list-style-type: none">• 10.6 kg

Contents of delivery

2 x side parts with mounted leads, 1 safety latch for containers	2 x rotating wheels w/o brake
	2 x rotating wheels with brake
	4 x shields for rotating wheels
2 x crossbars	8 x square washers
1 x working surface	8 x screws
1 x interior hex key	


ASSEMBLY INSTRUCTIONS

1. Unpack the unit's parts and check that everything is present.
Remove the packing material.

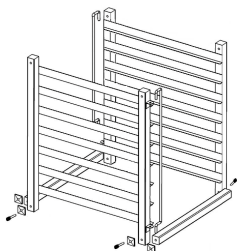


II. 1

2. First, mount the two crossbars at the bottom, in the elements mounted at the side of the transport cart. Place a square washer between the crossbar and side element, and between the side element and screw. Next, turn the screw with the internal hex-key (II. 1).
3. Mount the crossbars to the second side element, as described above.

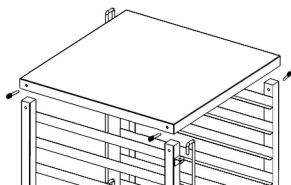

II. 2

4. Mount the working surface to the sides of the cart, using the screws included (il. 2).

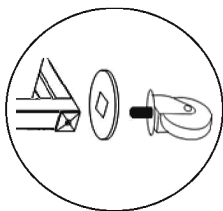

II. 3

5. Place the transport cart on its side or the working surface, and mount the rotating wheel shields. Next, screw the 4 rotating wheels into the cart's side elements (il. 3).

6. Place the transport cart on its swivel wheels and check its stability.
7. The transport cart may be aligned by adjusting swivel wheels.
8. When the transport cart is in the desired location, block the swivel wheels with brakes, to prevent it from being accidentally moved or overturned.

Tips for the user

- Insert the appropriate containers into the leads and secure them at the front and rear using the safety latches by raising them and then closing them in front of the containers (il. 4).



II. 4

- Regularly clean the transport cart with a moist, soft cloth.
- Never use harsh cleaning agents that could damage the cart's surface.
- Then dry the transport cart with a soft cloth.

Bartscher GmbH
 Franz-Kleine-Str. 28
 D-33154 Salzkotten
 Germany

phone: +49 (0) 5258 971-0
 fax: +49 (0) 5258 971-120