

TA 100



300079

Gebrauchsanleitung
Tablett-Abräumwagen

D/A/CH

Instruction manual
Tray clearing trolley

GB/UK

Mode d'emploi
Chariot de rangement à plateaux

F/B/CH

Manuale di utilizzo
Carrello trasporto vassoi

I/CH

Instrucciones de uso
Carro para bandejas

E

Manual de instruções
Carro porta-bandejas

P

Gebruiksaanwijzing
Dienblad-afruimwagen

NL/B

Brugsanvisning
Bakke-afrydningsvogn

DK

Инструкция по эксплуатации
Тележка для подносов

RUS

Kullanma kılavuzu
Tepsi toplama arabası

TR

Instrukcja obsługi
Wózek do sprzątania tac

PL

Návod k obsluze
Vozík na odklízení tácu

CZ

Upute za upotrebu
Kolica za raspremanje poslužavnika

HR

Használati útmutató
Talcaleszedő kocsi

H

Οδηγίες χρήσης
Τρόλεϊ συλλογής δίσκων


GR

PRODUCT DESCRIPTION:

Name:	• Tray clearing trolley TA100
Art. number:	• 300079
Material:	• Aluminium, plastic (white)
Equipment:	• 4 swivelling rubber castors, Ø 125 mm, 2 swivelling castors with brake; side walls writeable with standard whiteboard markers (not included in the delivery), assembly kit, easy assembly
Slots:	• Capacity up to 10 trays; 10 slots for serving trays 370 x 570 mm or fast- food trays 356 x 456 mm; Trays can be inserted from both sides
Distance between slots:	• 120 mm
Dimensions:	• W 470 x D 685 x H 1660 mm
Carrying capacity:	• max: 50 kg in total, 5 kg per slot
Weight:	• 29.0 kg
Equipment:	• Glass collection basket made of stainless steel W 385 x D 645 x H 75 mm, Drip tray made of stainless steel: W 435 x D 645 x H 25 mm

We reserve right to make the technical modifications!

List of parts

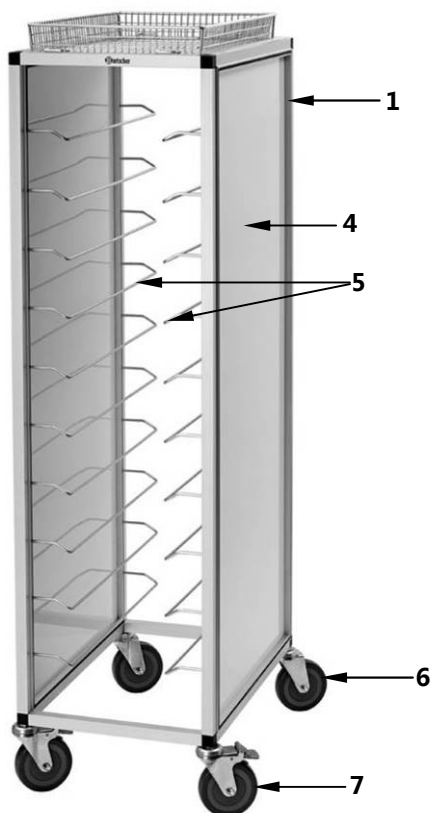

- 1 Frame
- 2 Glass collection basket
- 3 Drip tray
- 4 Side wall (2)
- 5 Tray slots (10)
- 6 Rubber castors without brake (2)
- 7 Rubber castors with brake (2)

Tips for the user

- Unpack the clearing trolley with equipment and check completeness of delivery. Dispose of all packaging materials according to the valid environment protection regulations.
- Remove protective foil from the trolley.



- Fix the castors to the side elements by screwing them into the frame corner posts (left figure).
- Place the clearing trolley on the castors and check its stability.

- Place the dripping tray up on the trolley frame and put the glass collection basket on it.
- The clearing trolley allows for inserting trays from both sides. Put appropriate trays in the slots (see section “**Product description**”).
- After placing the trolley in required location secure it with use of castors brakes, preventing unintended displacing.





- Write on the side walls according to requirements with use of whiteboard markers (not included in the delivery!).

Cleaning instructions

- Clean the trolley with soft, moistened cloth. **Never use** any cleaning agents which may scratch the trolley elements surfaces.

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120