


AT1001

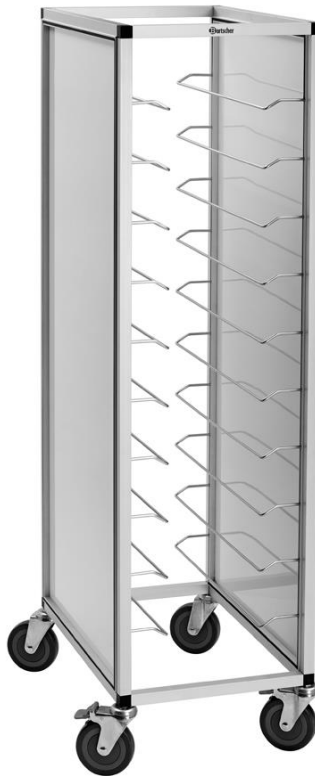


300079V

PRODUCT DESCRIPTION

Name	Tray trolley AT1001
Code-No.:	300079V
Material:	Aluminium, plastic
Model:	<ul style="list-style-type: none"> ▪ Designed for: <ul style="list-style-type: none"> - Fast-food trays - Serving trays ▪ Area of application: Clearing ▪ Tray holders ▪ Drawers: <ul style="list-style-type: none"> - Format: 370 x 570 mm / 356 x 456 mm - Number: 10 - Distance between the trays: 120 mm - Load-bearing capacity per drawer, max.: 5 kg ▪ Total load-bearing capacity, max.: 50 kg ▪ Can be loaded from both sides ▪ Castors: <ul style="list-style-type: none"> - 4 swivel castors, 2 with break - Diameter castors: 125 mm ▪ State at delivery: assembled for ready to use ▪ Side walls can be written on with standard whiteboard markers.
Dimensions:	W 470 x D 685 x H 1596 mm
Weight:	25 kg

We reserve the right to implement the technical modifications!

List of parts

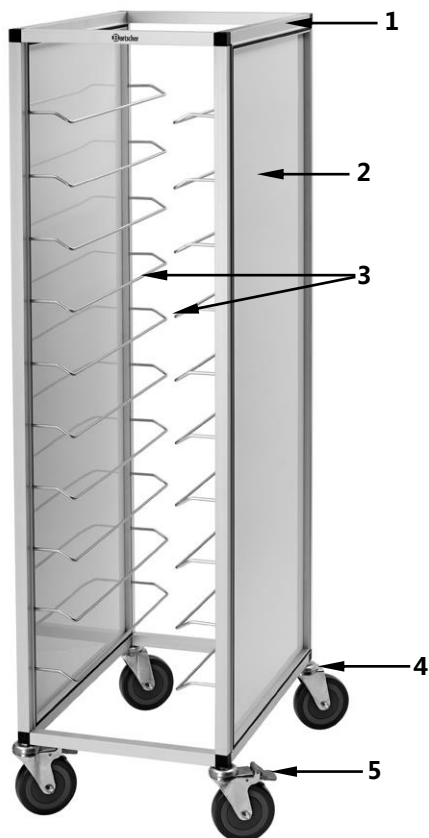

- 1 Frame
- 2 Side wall (2x)
- 3 Tray holders (10x)
- 4 Swivel castors without brake (2x)
- 5 Swivel castors with brake (2x)

Accessories (not included in the delivery!)

Glasses basket AT1000

Material: stainless steel

Dimensions:

W 385 x D 645 x H 75 mm

Weight: 2.75 kg

Code-No.: 300179



Drip tray AT1000

Material: stainless steel

Dimensions:

W 435 x D 645 x H 25 mm

Weight: 1.25 kg

Code-No.: 300279



User instructions

- Unpack the clearing trolley and accessories and check the delivery for completeness. Remove and dispose of all packaging material according to the environmental protection regulations.
- Remove protective film from the clearing trolley.



- Fix the castors to the side elements by screwing them into the frame corner posts (left figure).
- Place the clearing trolley on the castors and check its stability.

- The clearing trolley can be loaded from both sides. Place appropriate trays onto the tray holders (see section “**Product description**”)
- After placing the trolley in a required location secure it with use of the castor brakes, preventing unintended displacement.



- Write on the side walls according to requirements with standard whiteboard markers (not included in the delivery!).

Cleaning instructions

- Clean the clearing trolley with a soft, moistened cloth. **Never** use harsh or coarse cleaning agents which may scratch the surface of the clearing trolley. Finally, dry thoroughly all cleaned surfaces.

Bartscher GmbH
Franz-Kleine-Str. 28
33154 Salzkotten
Germany

phone: +49 5258 971-0
fax: +49 5258 971-120
Service-Hotline: +49 5258 971-197
www.bartscher.com